

QUICK GUIDE

WIRELESS EARPHONES ATW-01

Read this manual carefully

For your safety, read and follow this manual carefully to ensure proper use of the product and avoid any danger or physical damage.

Safety precaution

- Do not expose earphones to extreme temperatures.
- Do not attempt to modify this product. Doing so will void the warranty and could result in personal injury and/or product failure.
- Do not immerse in water, such as while taking a bath or washing your face, otherwise sound deterioration or failures may result.
- Wipe the earphones and sleeves with mild antiseptic to avoid infections. Do not use alcohol-based disinfectants.
- The cable connectors to the earphones may collect debris or other deposit that can affect audio quality. If this happens, disconnect the cables and clean them using a dry cotton swab.
- Set the volume level of the audio device to minimum, and then after connecting the earphones, adjust the volume gradually. Sudden exposure to loud noises could cause hearing damage.
- Stop using the earphones immediately if they are causing great discomfort, irritation, rash, discharge, or any other uncomfortable reaction.
- Do not use when a failure to hear your surroundings could be dangerous, such as while driving, or when biking, walking, or jogging where traffic is present and accidents could occur.

CAUTION:

- Risk of explosion if battery is replaced by an incorrect type.
- Replacement of charging case or earphones with incorrect type that can defeat a safeguard.
- Replacement of a battery with an incorrect type that can defeat a safeguard.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Warning

The marking information is located at the back of apparatus. No naked flame sources, such as lighted candles, should be placed on the apparatus. If you open the device and try to repair it by yourself you will lose the warranty. All applications provided by third parties and installed in this device may be modified and/or stopped in any moment. Visual FAN S.A. will not be held responsible in any way for revision of services or content of these applications. Any request or question regarding third party applications should be addressed to the owners of these applications.

Recycling

Processing of electric and electronic equipment at the end of their service life (applicable in member countries of the European Union and other European countries operating a selective waste collection system). This symbol, affixed to the product or its packaging, indicates that the product must not be processed with household waste. It must be brought to an electric and electronic waste collection point for recycling and disposal. By ensuring the appropriate disposal of this product you also help in preventing potentially negative consequences for the environment and human health. The recycling of materials helps preserve our natural resources. For further information regarding the recycling of this product, please contact your municipality, local waste disposal center or the store where the product was purchased.



VISUAL FAN S.A.
61 BRAZILOR, 500313
BRASOV, ROMANIA
www.allviewmobile.com

*Scan the QR code with your mobile device to save the Allview contact details



EU DECLARATION OF CONFORMITY

No. 1679

We, S.C. Visual Fan S.A., with the headquarters in Brasov, 61, Brazilor St., 500313 Romania, registered at the Trade Commerce Brasov under no. J08/818/2002, CUI RO14724950, as the manufacturer, assure, guarantee and declare on our own responsibility, according to the provisions from Directive 2001/95/CE, regarding the regime of the products and services, which can be harmful for life and health, that the product ATW-01 from ALLVIEW, does not jeopardize the life, health and labor protection, does not produce a negative impact over the environment and is in accordance with:
- Directive no. 2011/65/UE, modified by 2014/8/UE regarding the usage restrictions of certain dangerous substances in electric and electronic equipment
- Directive regarding the radio equipment RED 2014/53/EU (HG 740/2015)
- Directive 2014/35/UE regarding the assurance of users of low voltage equipment
- Directive regarding the electromagnetic compatibility EMC 2014/30/EU (HG 487/2016)
- The safety requests of the European Directive 2001/95/EC and the EN 60065:2002/A12:2011 and EN 60950-1:2006/ A1:2010 /A11:2009/A12:2011 standards, regarding the level of decibels emitted by the sold appliances.
The product has been assessed according to the following standards:
- Health and safety: EN 62479-1:2010; EN 50322-2:2013; EN 50360:2017; EN 50566:2017; EN 62209-1:2016; EN 62209-2:2010; EN 62479:2010.
- EMC: EN 301 489-1 V2.2.0; EN 301 489-17 V3.2.0; EN 301 489-19 V2.1.0; EN 301 489-52 V1.1.0; EN 55032:2015; EN 55035:2017.
- Radio spectrum: EN 301 511 V12.5.1; EN 301 908-1 V11.1.1; EN 301 908-2 V11.1.2; EN 303 345 V1.1.7; EN 300 328-1 V2.1.1; EN 303 413 V1.1.1.

The evaluation procedure of the conformity was made according to Directive 2014/53/EU, the documentation being stored at S.C. Visual Fan S.A., Brasov, 61 Brazilor St., 500313, Romania and will be offered at request.

The product has the CE mark on it. The declaration of conformity is available at www.allviewmobile.com.

CE Brasov
Date: 13.09.2022




TECHNICAL SPECIFICATIONS

Bluetooth	5.1 + EDR, BLE (used for connection with compatible devices)
Wireless range	10m
Music play time	4h
Combined play time	16h
Charging type	Charging base
Charging voltage	5V
Earphones battery	35mAh
Charging base battery	350mAh
Earphones charging time	1.5h
Frequency range	20Hz – 20kHz
Charging base size	50x60mm
Earphones net weight	32g
OS compatibility	Android, iOS
Package content	1x Set wireless earphones, 1x Charging base, 1x USB type C cable, 1x Quick guide

Usage instructions

Product main view

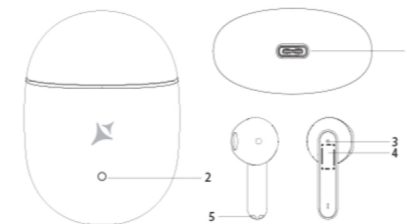

1.	USB Type-C Charging Port
2.	Charging Base Indicator
3.	Charging Indicator for Earphones
4.	MFB (Multi-Function Button) Touch Control
5.	Charging Pogo Pin

Status No.	Status	Earphones Performance
1	TWS Pairing or Bluetooth Pairing	The indicator flashing red and blue alternately.
2	Call Mode	When in a call, the light went off.
3	Earphones Charging Mode	During charging, the indicator turns to always on Red, and turns off when fully charged. The Red indicator automatically goes out.
4	Play Music	The light turn off.
5	Low Battery	Red light flashes 3 times 150ms each 10s all around.

Status No.	Status	Charging Base Performance
1	Charging Status of the Charging Base	The charging case has 1 indicator light (red). When charging box is plugged in, red light flash 1 time each 1s When charging box is fully charging, red light is steady. Earphones are charged in case, light off.

TWS Pairing

HOW TO PAIR

Pick up the earphones, two earphones will enter auto-pairing mode and connect with each other after few seconds, main earphone indicator alternately flash red & blue, the other flash blue once each 5s. Then open the phone's BT wireless function to search.

Cell phone begins to search for wireless devices (see the user guide of your phone for instructions), and select device name from wireless device list.

TWS Reconnected

When the earphones and the mobile phone have been paired, don't need to reconnect, the earphones will automatically connect with last mobile phone (firstly ensure the mobile phone's related BT wireless function have been opened, and the distance between your earphones and phone is within effective distance).

Answer/End a Call



When call incoming, double press MFB of earphone (R) or earphone (L) to answer the call. In call mode, double press MFB of earphone (R) or earphone (L) to end the call.

Reject Call



When Call in Coming, long press MFB 2s of earphone (R) or earphone (L) to reject the call.

Music Pause/Playing



- In standby mode, double press MFB of earphone (R) or earphone (L) to play music.
- On music playing state, double press MFB of earphone (R) or earphone (L) to pause music.

Pre/Next Song



- During playing, long press MFB 2s on left earphone to previous song, long press MFB 2s on right earphone to next song.

Product Description

Wireless earphones should be used with the compatible devices which support wireless technology. This allows you to make calls and enjoy the music streaming at any time freely.

HOW TO USE

- Identify accordingly to L&R and wear the earphone (L) and earphone (R) respectively



Turning ON/OFF

Method 1

Touch and hold earphone(MFB) each for 2 seconds to power on, the earphones indicator alternately flash blue&red for TWS pairing.

Method 2

Turn on automatically when the earphones Pick Up.

Put them back to the charging case to power off.

Voice Assistant

When standby, press the MFB 3 times to activate voice assistant (optional).

Delete Pairing Records on the earphones

Long press MFB 7s at least of earphone (R) and earphone (L) at the same time to delete bluetooth pairing records.

Maintenance

- Do not use abrasive cleaning solvents to clean the earphones.
- Do not allow the earphones to touch with any sharp objects as this will cause scratching and damage.
- Please keep earphones away from high-temperature, humidity and dust.

TROUBLE SHOOTING

Trouble	Reasons	Solutions
Cannot turn on	Low battery	Charging earphones for protection 2 hours
Cannot turn on by picking up the earphones / No indicator light when earphones being charged	Charging base Low battery protection	Charging both the earphones and Charging Base for 2 hours
No sounds after pairing	Wrong pairing	Pairing again and increasing the volume of connected devices.

Charging Ways of earphones

- Put the earphones (L)(R) to the corresponding position in the bottom of charging base. The indicator lights of earphones are red when being charging, when fully charge, then turn off automatically.

Charging Ways of Charging Base

- Please charge the base via USB charging cable. The indicator light follows the status flashing in red when charging, turn to always on red when fully charged.

Use the USB cable to connect with computer

- Note 1: Check the charging device is suit to the earphones or not.
- Note 2: Use only the supplied charger to charge the earphones, if use other device may violate the validation or the maintenance article of this product and may cause danger.
- Note 3: Do not attempt to force open the built-in battery as this could damage the earphones.
- Note 4: A fully charged earphones will lose its power automatically if left unused. It is recommended to charge the earphones each three months.
- Note 5: Do not leave the earphones in a too hot or too cold condition (best between 15°C and 45°C), which may affect the earphones' operation although it is fully charged.
- Note 6: Do not dispose of the earphones into fire or water.

Trouble	Reasons	Solutions
The two earphones TWS pairing failure/ TWS paired successful but Cannot find the earphones	Too many pairing records	Delete pairing records
Charging base without indicator light when charging	DC power supply doesn't output power	Check whether the USB-C charging cable is plugged well or not
Earphones without indicator light when charging	The earphones couldn't being charged in charging base	1) Checking earphones charging interface whether has touched to POGO PIN of charging base and the location is correct or not. 2) Charging for charging base
Turning off automatically	Low battery	Charging earphones for 1-2 hours
Earphones echo	Volume is Too loud or environment is noisy	Adjust the volume at phone or change a place
Noise in call	Environmental interference caused or distance between earphones and mobile is too far	Change a place or move the earphones close to the mobile phone
Low voice of the calling party	Wearing earphones are wrong	Adjusting wearing position of earphones

GHID RAPID

CASTI WIRELESS ATW-01

Cititi acest manual cu atentie

Pentru siguranta dumneavoastra, cititi si urmati acest manual cu atentie pentru a asigura utilizarea corespunzatoare a produsului si a evita orice pericol sau deteriorare fizica.

Precautii

- Nu expuneti castile la temperature extreme.
- Nu incercati sa modificati acest produs. Facand acest lucru veti pierde garantia si pot cauza rani si/sau nefunctionare produs.
- Nu va introduceti in apa curm ar fi cazul in care faceti baie sau va spalati pe fata, altfel se poate deteriora sunetul sau se poate ajunge la nefunctionarea produsului.
- Stergeti castile cu antiseptic mediu pentru evitarea infectiilor. Nu utilizati dezinfectanti pe baza de alcool.
- Cablurile de conectare la casti pot colecta impuritati sau alte depozitari care pot afecta calitatea audio. Daca acest lucru se intampla, deconectati cablurile si curatati-le utilizand betisoare cu bumbac.
- Setati nivelul volumului audio la minim si dupa conectarea castilor ajustati volumul gradual. Expunerea brusca la sunete puternice poate cauza deteriorarea auzului.
- Opriti imediat utilizarea castilor daca ele cauzeaza disconfort ridicat, iritatie, eczema sau orice alta reactie adversa.
- Nu le utilizati atunci cand blocarea sunetelor inconjuratoare poate fi periculoasa cum ar fi in timpul condusului, mersului cu bicicleta sau alergarii in prezenta traficului si a pericolului de accidente.

ATENȚIE:

- Exista risc de explozie a bateriei daca este inlocuita cu model incompatibil.
- Inlocuirea bazei de incarcare sau a castilor cu modele incompatibile nu sunt recomandate.
- Inlocuirea bateriei cu model incompatibil nu este recomandata.
- Aruncarea bateriei in foc sau in cuptor incins, zdrobirea mecanica sau taierea bateriei pot duce la explozie.
- Pozitionarea bateriei intr-un mediu cu temperaturi ridicate poate duce la explozie sau la scurgeri de substante inflamabile.
- O baterie expusa la presiune foarte scazuta poate duce la o explozie sau la scurgeri de substante inflamabile.

Avertizare

Marcjele sunt pozitionate pe spatele aparatului.

Nu plasati surse de foc deschis in dreptul aparatului.

Daca desfaceti produsul si incercati sa il reparati pe cont propriu veti pierde garantia. Toate aplicatiile furnizate de catre terțe parti si instalate in acest dispozitiv pot suferi modificari sau pot fi oprite in orice moment. Visual FAN S.A. nu este responsabila in nici un fel de modificarea serviciilor sau a continutului acestor aplicatii. Oricare cerinta sau intrebare legata de aplicatiile terțe trebuie adresata detinatorilor acestor aplicatii.

Reciclare

Procesare echipamentelor electrice si electronice la finalul duratei de utilizare (aplicabila in tarile membre ale Uniunii Europene, tari care opereaza un sistem de colectare selectiva a deseurilor).

Acest simbol atasat pe produs sau pe ambalajul lui, indica faptul ca produsul nu trebuie procesat impreuna cu deseurile casnice. El trebuie adus la un punct de colectare a deseurilor electrice si electronice pentru reciclare.

Prin asigurarea depunerii corespunzatoare a produsului ajutati la prevenirea eventualelor consecinte negative pentru mediu si sanatatea umana. Reciclarea materialelor ajuta la conservarea resurselor naturale.



VISUAL FAN S.A.
BRAZILOR 61, 500313
BRASOV, ROMANIA
www.allviewmobile.com

*Scanati codul QR cu dispozitivul dumneavoastra mobil pentru a salva datele de contact Allview



DECLARATIE UE DE CONFORMITATE

No. 1679

Noi, S.C. Visual Fan S.A., cu sediul social în Brasov, Str. Brazilor nr.61, 500313, România, înregistrată la Registrul Comerțului Brasov sub nr. J08/818/2002, CUI RO14724950, în calitate de producator, asigurăm, garantăm și declarăm pe proprie răspundere, conform prevederilor Directivei 2001/95/CE privind regimul produselor și serviciilor, care pot pune în pericol viața și sănătatea, că produsul **ATW-01** marca ALLVIEW, nu pune în pericol viața, sănătatea, securitatea muncii, nu produce impact negativ asupra mediului și este în conformitate cu:

- Directiva nr. 2011/65/UE modificată de 2014/8/UE privind restricțiile de utilizare a anumitor substanțe periculoase în echipamentele electrice și electronice.
- Directiva privind echipamente radio RED 2014/53/EU (HG 740/2016)
- Directiva 2014/35/UE privind asigurarea utilizatorilor de echipamente de joasă tensiune
- Directiva cu privire la compatibilitatea electromagnetică EMC 2014/30/EU (HG 487/2016)
- Cerințele de siguranță ale Directivei Europene 2001/95/EC și a standardelor EN 60065:2002/A12:2011 și EN 60950-1:2006/A1:2010 /A11:2009/A12:2011, referitor la nivelul de decibeli emis de aparatele comercializate.

Produsul a fost evaluat conform următoarelor standarde:

- Sănătate și siguranță: EN 62479-1:2010; EN 50322-2:2013; EN 50360:2017; EN 50566:2017; EN 62209-1:2016; EN 62209-2:2010; EN 62479:2010.
- EMC: EN 301 489-1 V2.2.0; EN 301 489-17 V3.2.0; EN 301 489-19 V2.1.0; EN 301 489-52 V1.1.0; EN 55032:2015; EN 55035:2017.
- Spectru radio: EN 301 511 V12.5.1; EN 301 908-1 V11.1.1; EN 301 908-2 V11.1.2; EN 303 345 V1.1.7; EN 300 328-1 V2.1.1; EN 303 413 V1.1.1;

Procedura de evaluare a conformității a fost efectuată în conformitate cu Directiva 2014/53/EU, documentația fiind depozitată la S.C. Visual Fan S.A., Brasov str. Brazilor nr.61, 500313, România și va fi pusă la dispoziție la cerere. Produsul are aplicat marcajul CE.

Declarația de conformitate este disponibilă la adresa www.allview.ro.



Brasov

Data: 13.09.2022



Director


Gheorghe Cotuna

SPECIFICATIILE TEHNICE

Bluetooth	5.1 + EDR, BLE (utilizat in scopul conectarii cu dispozitive compatibile)
Raza actiune	10m
Durata redare muzica	4h
Durata redare combinata	16h
Tip incarcare	Baza incarcare
Tensiune incarcare	5V
Acumulator casti	35mAh
Acumulator baza incarcare	350mAh
Durata incarcare casti	1.5h
Gama frecventa	20Hz - 20kHz
Dimensiuni baza incarcare	50x60mm
Masa neta casti	32g
Compatibilitate sistem operare	Android, IOS
Continut pachet	1 x Set casti wireless, 1 x Baza incarcare, 1 x Cablu USB tip C, 1 x Ghid rapid

Instructiuni utilizare

Vedere principala produs

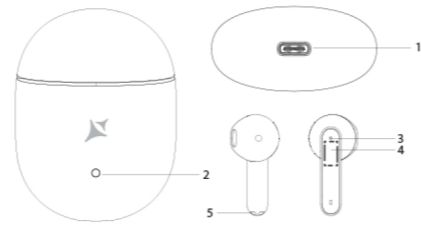

1.	Port incarcare USB Tip C
2.	Indicator baza incarcare
3.	Indicator incarcare casti
4.	BMF (Buton multifunctional) Control prin atingere
5.	Pogo Pin incarcare

Asociere TWS

MOD ASOCIERE

Ridicati castile si acestea vor intra automat in modul de asociere si se vor conecta intre ele dupa cateva secunde, cea principala iluminand alternativ rosu & albastru si cealalta albastru la fiecare 5 secunde. Apoi activati functia BT wireless de cautare a telefonului.

Telefonul mobil incepe sa caute dispozitivele wireless (vedeti instructiunile telefonului) si apoi selectati numele dispozitivului din lista.

Reconectare TWS

Cand castile si telefonul mobil au fost asociate nu mai este necesara reconectarea, castile se vor conecta automat cu ultimul telefon mobil (asigurati-va ca functia BT wireless a telefonului este activa si ca distanta dintre casti si telefon este in interiorul razei de actiune).

Raspuns/Terminare Apel



La primire apel apasati de doua ori BMF al castilor pentru a raspunde. In mod apel apasati de doua ori BMF al castilor pentru a incheia apelul.

Nr.	Status	Operatii legate de functionarea castilor.
1	Asociere TWS sau Bluetooth	Lumina se aprinde alternativ rosu si albastru.
2	Mod apel	In timpul apelului lumina se stinge.
3	Mod incarcare casti	In timpul incarcarii lumina va fi intotdeauna rosie si se stinge automat cand incarcarea s-a terminat.
4	Redare muzica	Lumina se stinge.
5	Nivel scazut de incarcare al bateriei.	Lumina rosie se aprinde de 3 ori cate 150ms in interval de 10 sec.

Nr.	Status	Operatii legate de functionarea bazei de incarcare.
1	Status incarcare baza de incarcare.	Baza de incarcare are o lumina indicatoare rosie. Cand baza de incarcare este conectata, culoarea rosie se va aprinde la fiecare secunda. Cand baza de incarcare este incarcata complet, lumina rosie ramane aprinsa. Cand castile sunt incarcate in baza lumina se stinge.

Respingere Apel



La primire apel apasati BMF timp de 2 secunde pe una din casti pentru a respinge apelul.

Pauza/Redare muzica



In mod standby apasati de doua ori BMF pe una din casti pentru a reda muzica.

In timpul redarii muzicii apasati de doua ori BMF pe una din casti pentru a pune pauza.

Melodie Precedenta/Urmatoare



In timpul redarii apasati lung BMF timp de 2 secunde pe casca stanga pentru a reda melodia precedenta sau pe casca dreapta pentru a reda melodia urmatoare.

Descriere produs

Castile wireless trebuie folosite cu dispozitive compatibile care suporta si ele tehnologia wireless. Aceasta permite efectuarea de apeluri si redarea de muzica in orice moment.

MOD UTILIZARE

Identificati-le conform pozitionarii stanga / dreapta si purtati-le corespunzator.



Pomire/Oprire

Metoda 1

Atingeti si tineti apasat fiecare BMF timp de 2 secunde pentru pornire iar indicatorul luminos al castilor va clipi alternativ albastru&rosu pentru asocierea TWS.

Metoda 2

Pornire automata la ridicarea castilor.

Puneti-le la loc in baza de incarcare pentru oprire.

Asistent vocal

In mod standby apasati BMF de 3 ori pentru a activa asistentul vocal (optional).

Stergere inregistrari asociere casti

Apasati lung BMF timp de minim 7 secunde pe ambele casti in acelasi timp pentru a sterge inregistrările de asociere Bluetooth.

Intretinere

- Nu utilizati solventi abrazivi de curatare pentru a curati castile.
- Nu atingeti castile cu obiecte ascutite pentru ca acestea pot cauza zgarieturi si deteriorare.
- Va rugam sa tineti castile departe de temperaturi ridicate, umiditate si praf.

DEPANARE

Problema	Cauze	Solutii
Nu pornesc	Nivel redus al bateriei	Incercarea castilor timp de 2 ore.
Nu pornesc prin ridicare/indicatorul luminos nu arata nimic in timpul incarcarii castilor	Mod protectie baza din cauza nivelului redus al bateriei.	Incercarea castilor si a bazei timp de 2 ore.
Nici un sunet dupa asociere.	Asociere eronata.	Se reia asocierea si se creste volumul dispozitivului conectat.

Modalitati de incarcare a castilor

- Puneti castile in pozitia corespunzatoare (L)(R) in baza de incarcare. Indicatorul luminos al castilor este rosu in timpul incarcarii si dupa incarcarea completa se stinge automat.

Modalitati de incarcare a bazei de incarcare

- Va rugam sa incarcati baza prin cablu USB. Indicatorul luminos va arata stadiul prin lumina rosie intermitenta in timpul incarcarii si lumina rosie permanenta cand incarcarea este completa.

Utilizati cablul USB pentru conectarea la un PC

- Nota 1: Verificati daca dispozitivul de incarcare este potrivit pentru casti sau nu.
- Nota 2: Utilizati doar incarcatorul potrivit, altfel puteti afecta dispozitivul sau intretinerea lui si poate rezulta un pericol.
- Nota 3: Nu incercati sa forcati desfacerea bateriei incorporate intrucat acest fapt poate deteriora castile.
- Nota 4: Castile complet incarcate isi vor pierde din putere daca sunt nefolosite. Este recomandat sa incarcati castile la fiecare 3 luni.
- Nota 5: Nu lasati castile in mediu prea cald sau prea rece (cel mai bine intre 15°C si 45°C) pentru ca acest fapt poate afecta utilizarea castilor chiar daca sunt complet incarcate.
- Nota 6: Nu aruncati castile in foc sau apa.

Problema	Cauze	Solutii
Asociere casti esuata / Asociere reusita dar castile nu sunt identificate	Prea multe inregistrari de asociere	Stergeti inregistrările de asociere
Baza de incarcare nu indica nimic in timpul incarcarii	Nu exista alimentare de la retea	Verificati daca este conectat corect cablul USB tip C
Castile nu indica nimic in timpul incarcarii	Castile nu pot fi incarcate in baza de incarcare	1) Verificati daca interfata de incarcare a castilor este conectata corect la POGO pin si daca sunt castile pozitionate corespunzator 2) Incarcati baza de incarcare
Oprire automata	Nivel redus al bateriei	Incercati castile pentru 1-2 ore
Ecou in casti	Volumul este prea ridicat sau mediul zgomotos	Ajustati volumul telefonului sau schimbati locul
Zgomot in apel	Interferente ale mediului sau distanta intre casti si telefon este prea mare	Schimbati locul sau mutati castile mai aproape de telefon
Volum scazut al vocii apelantului	Pozitionare incorecta a castilor	Ajustarea pozitiei castilor