ALLVIEW®

# ALLDRO 3

## User's Manual
## Manual de utilizare

# Cuprins



**VA MULTUMIM .....3**
Continut pachet .....3
Caracteristici .....4

**FAMILIARIZAREA CU ALLDRO 3 .....5**
Dsepre Touchscreen.....8
Folie de protectie.....8
Actiunile Touchscreen-ului.....8
Despre senzorul de orientare.....10
Incarcarea acumulatorului.....10
Introducerea unui card de Memorie.....11

**SA INCEPEM.....12**
Pornirea si oprirea tabletei .....12
Pornirea si oprirea ecranului(Standby).....13
Deblocarea ecranului.....13
Ecranul de intimpinare pe scurt .....14
Despre aplicatii.....15
Aplicatii preinstalate.....16
Instalarea aplicatilor.....17
Despre meniuri.....17
Despre notificari.....19

**CONECTAREA LA INTERNET ..... 20**
Cerinte ..... 20
Conectarea la o retea wi-fi.....21

**NAVIGAREA PE INTERNET.....23**

**GESTIONAREA APLICATIILOR.....27**

**CONEXIUNI OPTIONALE ..... 30**
Conectarea la un calculator PC..... 30
Conectarea la TV .....31
Conectarea castilor.....32
Utilizarea adaptorului USB ..... 33
Conectarea unei tastaturi ..... 33
Conectarea unui dispozitiv de stocare..... 33

**SETAREA OPTIUNILOR DE SISTEM .....34**

**SPECIFICATII .....35**

**NOTE DE SIGURANȚĂ.....37**

# Va multumim.

Va felicităm pentru achiziționarea Tabletei Alldro3. Acest ghid vă va ajuta să va familiarizati cu tableta dvs., vă rugăm să citiți cu atenție şi sa-l salvati pentru o referință viitoare.

Ptr. alte detalii, informatii la zi si sfaturi utile va rugam sa vizitati si site-ul nostru: www.allview.ro.

*Acest manual de utilizare este de asemenea disponibil in format PDF pe site-ul nostru.*

## Continut pachet

Va rugam sa va asigurati ca accesoriile prezentate mai jos sint incluse in cutia produsului. Daca exista lipsuri va rugam sa contactati distribuitorul local de unde ati achizitionat produsul.

- Tableta ALLDRO3
- Husa protectie
- Cablu USB
- Cablu adaptor USB
- Casti stereo
- Incarcator priza

*Acest pachet poate contine pungi de plastic sau alte materiale care prezinta un pericol ptr. copii. Asigurați-vă că veti arunca corespunzator materialele de ambalare după deschidere.*

# Caracteristici

- Navigare prin Web.
  Vizitati website-urile favorite
- Acces e-mail
  Ramineti in contact cu prietenii si familia
- Vizualizati clipuri video din YouTube™
  Rasfoiti cea mai populara comunitate video din lume
- Cititi cartile favorite
  Descarcati mii de carti cu ajutorul aplicatiei preinstalate Aldiko E-book reader *
- Descoperiti mii de aplicatii ptr. Android™
  Descarcati aplicatii din AppsLib — marketul special ptr. tablete
- Conectare la Internet wireless
  Retea Wi-Fi 802.11 b/g
- Iesire HDMI™ ptr. TV **
  Bucurati-va de clipurile video, fotografii si altele din confortul camerei dvs.
- Bucurati-va de libraria media oriunde
  Dispozitivul portabil reda muzica, clipuri video si fotografii
- Cititor card microSD
  Mariti capacitatea de stocare (suporta pina la 32 GB)
- Camera integrata
  Camera frontala integrata
- Detectie automata a orientarii
  Pozitinati tableta pe oricare din laturi, imaginea se va roti corespunzator

* Citirea de carti in format ePub necesita aplicatia preinstalata Aldiko E-book reader.

** Necesita un cablu HDMI Tip A-la-Tip C (neinclus). Redarea in format1080p HD necesita clipuri video encodate la 1080p. Calitatea Streamingului video poate fi afectata de sursa clipului video si de calitatea si conditiile conexiunii de internet.

# Familiarizarea cu tableta Alldro 3



| Nume | | Descriere |
|---|---|---|
| 1 | Tasta Volum – | Apasati ptr. a micsora nivelul volumului. |
| 2 | Tasta Volum + | Apasati ptr. a mari nivelul volumului. |
| 3 | Tasta pornire | Apasati ptr. a porni tableta sau ptr. a porni/opri ecranul.<br>Press and hold to access the Power Off menu. |
| 4 | Difuzoare | Difuzoare stereo. |

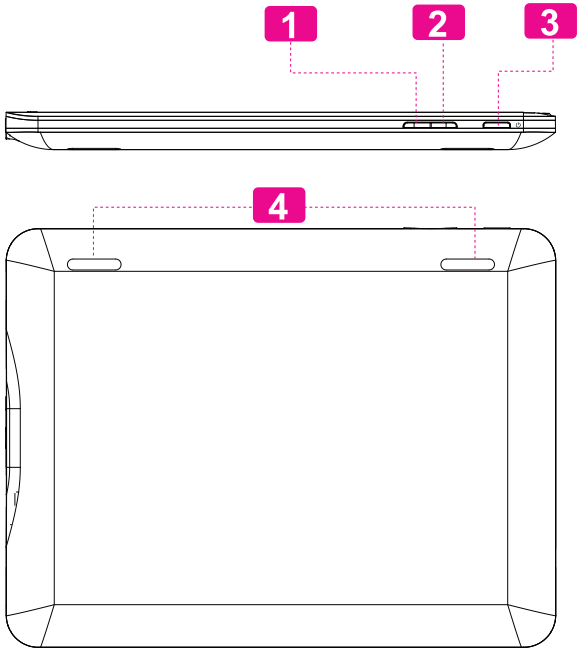

| | | |
|---|---|---|
| 5 | Tasta rapida Meniu | Tastati ptr. a vizualiza optiunile de meniu<br>*Nota: Cind tastati **Meniu** in orice aplicatie, veti putea accesa functiile disponibile ptr. a cea plicatie. Ptr. a vizualiza optiunile ptr. sistemul Android, tastati **Meniu** in ecranulprincipal **Acasa**.* |
| **6** | Tasta rapida **Acasa** | Tastati ptr. a reveni in ecranul Acasa. Tineti apasat mai mult de 3sec ptr. a vizualiza lista aplicatiilor folosite recent. Tastati pe o aplicatie din lista ptr. a o lansa. |
| 7 | Tasta rapida **Inapoi** | Tastati ptr a reveni in ecranul anterior. Daca este afisata tastatura pe ecran, tastati ptr. a inchide tastatura. |
| **8** | Camera | Camera frontala |

| | Name | Description |
|---|---|---|
| 9 | Slot card microSD | Introduceti cardul de memorie externa microSD aici. |
| 10 | Mufa alimentare (intrare DC) | Folositi ptr. a incarca tableta si ptr. a o porni cu alimentatorul de priza incorporat. |
| 11 | Tasta **Reset** | Apasati ptr. a reseta tableta in situatia in care se blocheaza sau nu mai raspunde comenzilor. (Folositi o agrafa de birou sau alt dispozitiv subtire si apasati usor aceasta tasta prin orificiul corespunzator.) |
| 12 | Port USB 2.0 | Conectati la un PC ptr a transfera date (de ex., muzica, clipuri video, fotografii, fisiere). |
| 13 | Mufa HDMI (mini Tip C) | Conectati la un TV sau alte dispozitive de afisare. (videoproiector, monitor, etc) |
| 14 | Mufa jack casti | Mufa jack ptr. conectarea castilor stereo.<br>*Nota: Difuzoarele sint automat oprite in momentul conectarii castilor stereo.* |

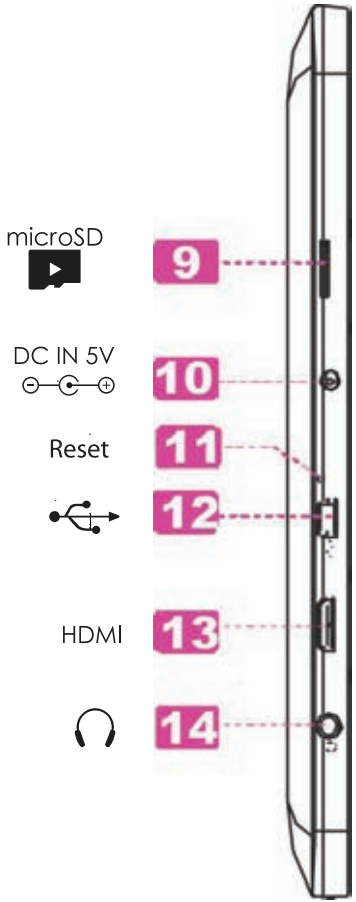

# Despre Touchscreen

Tableta dvs. este echipata cu un touch-screen usor de folosit, care va permite sa accesati functiile tabletei. Folositi degetul ptr. a atinge zona de display unde este afisata o pictograma. Daca atingeti si tineti apasat mai mult de 3 sec, va interpreta ca o apasare continua a tastei.

> *Ptr. a evita stricarea ecranului, nu apasati cu forta excesivaori cu alte obiecte in afara de degetul dumneavoastra. Pentru a avea o functionare foarte buna, asigurati-va ca degetele dvs. sint curate inainte de a folosi touchscreenul.*

## *Folie protectie*

O folie foarte subtire a fost aplicata peste touchscreen ptr. protectie pe durata transportului. Folia de protectie trebuie indepartata inainte de utilizare. Ptr. a o indeparta, prindeti doar dintr-un colt al ecranului si trageti usor de ea.

## *Actiunile Touchscreen-ului*

Puteti controla functiile tabletei cu ajutorul touchscreenului in combinatie cu cele 3 butoane localizate in partea superioara a tabletei. Ptr. a controla tableta cu ajutorul touchscreenului, folositi degetul dumneavoastra pentru a interactiona cu pictogramele, butoanele, tastatura virtuala de pe ecran si alte lucruri ce apar pe ecran.

| | |
|---|---|
| **Atingeti:** | Ptr. a accesa un obiect de pe ecran (ex., pictogramele aplicatiilor, butoane, bari de meniu si literele, cifrele/ simbolurile tastaturii virtuale) trebuie doar sa le atingeti cu degetul |

| | |
|---|---|
| **Atingeti si tineti apasat:** | Unele din obiectele de pe ecran au au o actiune alternative daca atingeti si tineti apasat pee le. (ex. Deschiderea unui meniu alternative sau activarea functiei de tragere). Ptr. a atinge si tine apasat pe un obiect, atingeti obiectul si nu miscati degetul pina cind actiunea apare. |
| **Trageti:** | Glisați un element de pe ecran pentru a modifica poziția (de exemplu, o pictogramă aplicație de pe ecranul de acasă). Pentru a glisa un element, atingeți şi țineți-l pentru o clipă, apoi fără ridicarea degetului mutati varful, degetului pe ecran pana cand elemen-tul ajunge la destinatia tinta |
| **Defilati:** | Treceți rapid sus / jos pe ecran pentru a defila într-o listă. Pe unele ecrane, ați putea fi în măsură să treceți la stânga / dreapta pentru a schimba vizualizarea. Pentru a trece, atingeți ecranul şi apoi mutati rapid degetul pe ecran, fara a ridica degetul. Nu întrerupeti miscarea pe ecran cu dege-tul de la punctul initial de contact. |

| | |
|---|---|
| **Atingeti de 2ori rapid:** | Atingeti rapid de două ori pe ecran pe o pagină Web sau alte zoom-uri (cererea trebuie să accepte funcția de double-tap/zoom). În browser, atingând de doua ori rapid o secțiune de pagină web va determina browser-ul sa mărească şi sa potrivească aceasta secțiune la lățimea ecranului. |

# Despre senzorul de orientare

Tableta conține un senzor care va schimba în mod automat orientarea celor mai multe ecrane in timp ce rotiti tableta. Senzorul funcționează cel mai bine atunci când tableta este rotita perpendicular pe sol (de exemplu, atunci când tableta este ținuta în poziție verticală şi nu este asezata pe spate).

Senzor de orientare poate fi pornit şi oprit în meniul de setări de afişare.

# Incarcarea acumulatorului

Tableta este echipata cu o baterie reîncărcabilă litiu-polimer.

Înainte de a utiliza tableta, bateria ar trebui să fie încărcată complet. Indicatorul de stare va lumina verde când bateria este încărcată complet.

Ptr. incarcarea acumulatorului:

1. Conectați adaptorului de alimentare inclus într-o priză AC 100-240V.
2. Conectați celălalt capăt al adaptorului de alimentare în mufa de alimentare de pe tableta.
3. Deconectați adaptorul de alimentare atunci când tableta este complet încărcata.

*Acumulatorul utilizat în acest dispozitiv poate prezenta pericol de incendiu sau de arsuri chimice, dacă este utilizat necorespunzator. Nu dezasamblați, nu incinerați, nu folositi dispozitivul in locuri cu căldură excesiva. Nu lăsați dispozitivul într-un loc expus la lumina directă a soarelui, sau într-o maşină cu ferestrele închise. Nu conectați aparatul la o sursă de energie, alta decât cea care este indicată aici sau pe etichetă, deoarece aceasta poate duce la riscul de incendiu sau şoc electric.*

# Introducerea unui Card de memorie

Tableta acceptă carduri de memorie microSD. Introduceți un card de memorie în slotul de card microSD pentru:

- Creşterea capacitatatii de memorie a tabletei
- Redarea fişierelor media stocate pe cardul de memorie (de exemplu, muzica, video, sau fişiere foto).

**Pentru a introduce un card de memorie:**

1. Aliniați cardul de memorie cu slotul de card. Contactele metalice de pe cardul de memorie trebuie sa fie cu fața în jos fata de ecranul LCD.
2. Glisați cardul în slotul de card. Împingeți cartela până când aceasta se fixează la locul său.

*Nu încercați să introduceți obiecte, altele decât un card de memorie microSD în slotul pentru card. Un card de memorie compatibil ar trebui să se potrivească cu uşurință în slotul de card, dacă întâmpinați rezistență, verificați alinierea corecta a cardului. Nu încercați să forțați cardul. Evitați să atingeți contactele aurite ale cardului de memorie.*

**Pentru eliberarea şi scoaterea unui card de memorie:**

1. **Atingeti Demontati cardul SD**

   a. Din ecranul de pornire, apăsați tasta Meniu, şi apoi atingeți Setari pentru a afişa meniul de setări.

   b. Atingeti **Card SD & dispozitive stocare** ptr a accesa Setari Card SD & dispozitive stocare.

   c. Atingeti **Demontati cardul SD** ptr. a pregati scoaterea cardului SD in siguranta.

2. Împingeți cartela în continuare în slot până când auziți un clic. Cardul va iesi din slot.
3. Apucați cardul de marginea acestuia ptr. a-l scoate.

*Pentru a evita deteriorarea şi corupere de date, nu scoateți un card de memorie în timp ce datele sunt scrise sau citite de pe card. De exemplu, nu scoateți un card în timp ce redati un fişier de muzică stocat pe card.*

# Sa incepem

## Pornirea si oprirea Tabletei

Ptr. a porni tableta:

- Apăsați şi mențineți apăsată tasta de pornire până când ecranul LCD se aprinde. Aşteptați până când apare ecranul de întâmpinare; Tableta este acum gata de utilizare.

Ptr. a opri tableta:

1. Apăsați şi mențineți apăsată tasta de pornire până când un mesaj de confirmare va aparea.

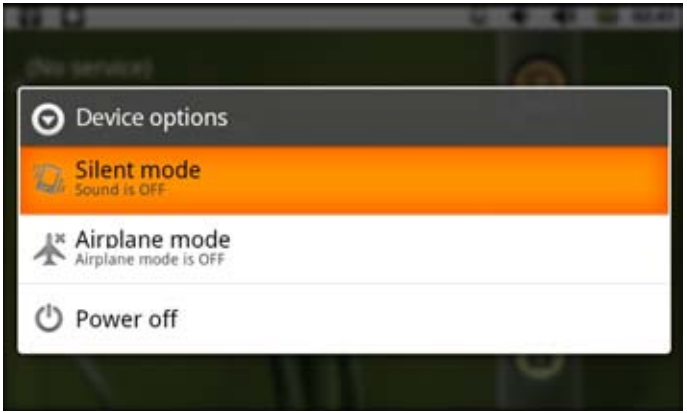


2. Touch **Power off** on the screen. A confrmation message will appear.

3. Atingeți OK pentru a opri tableta.

## *Pornirea si oprirea ecranului (Standby)*

Cind tableta este pornita, puteti opri ecranul ptr. a economisi bateria. Apasati doar tasta de pornire o singura data ptr. a opri ecranul. Apasati inca o data tasta de pornire ptr. a porni ecranul din nou.

*Pentru a conserva energia bateriei, ecranul poate fi setat pentru a se opri automat atunci când tableta nu este folosita (între 15 secunde şi 30 de minute). Această opțiune de ecran pot fi găsita în meniul de setări de afişare.*

## *Deblocarea ecranului*

Când ecranul se stinge, va trebui să il deblocati in momentul aprinderii. Pentru a debloca ecranul, glisați pictograma de blocare pe ecran spre pictograma difuzor.

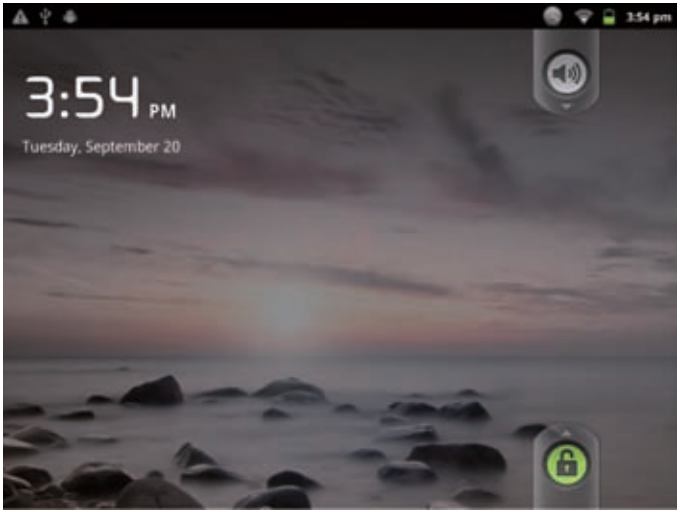

În cazul în care o parolă a fost stabilita, introduceți parola pentru a termina deblocarea ecranului. Ecranul Deblocare parola poate fi setat în **Locație şi meniul de setări de securitate**.

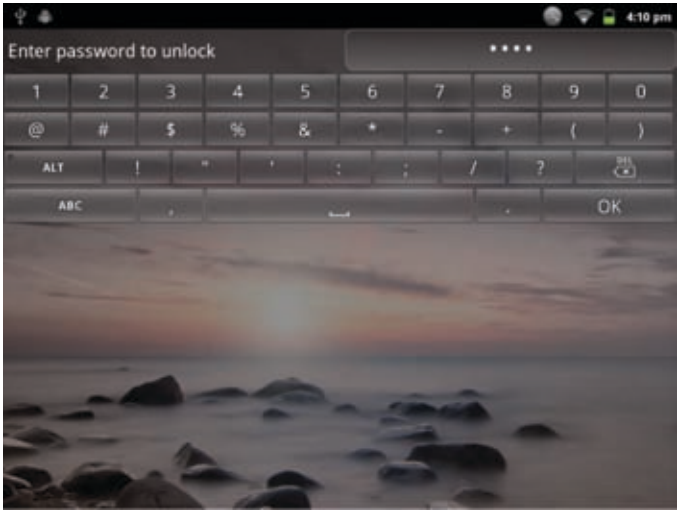


# Ecranul de întâmpinare pe scurt

Ecranul de pornire este punctul de plecare pentru toate aplicatiile si caracteristicile de pe tableta dvs.

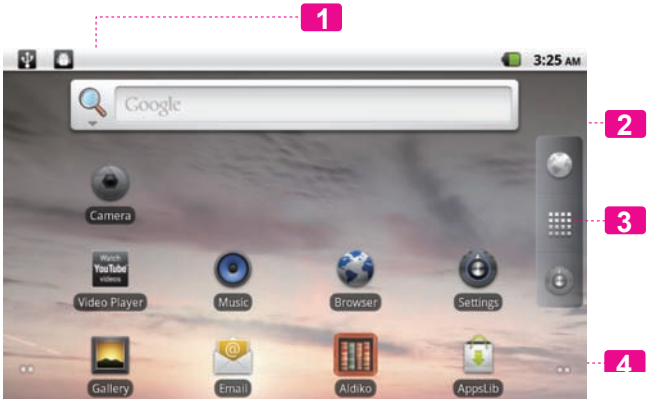

| | Nume | Descriere |
|---|---|---|
| 1 | Bara notifi-care | Prezinta iconuri notificare, cum ar fi mesaje noi şi alarme; trageți bara în jos până la partea de jos a ecranului pentru a deschide complet panoul Notificări. Partea dreaptă a barei arata, de asemenea, informații de stare, cum ar fi timpul, nivelul bateriei, şi puterea semnalului de rețea.<br>*Note: You can press the **Menu** key and then touch **Notifications** to open the full Notifications panel from the Home screen.* |
| 2 | Widget-uri | Widget-urile sunt mici aplicatii pe care le puteți folosi direct de pe ecranul de start. Pentru a adăuga widget-uri la ecranul de început, atingeți şi tineti apasat un loc gol pe ecran acasă; Adaugare in meniul ecranul principal va aparea. Atingeți Widget-uri, apoi selectați un widget din meniu. |
| 3 | Ecranul de lansare | Deschideți Ecranul de lansare pentru a vizualiza o listă a tuturor aplicațiilor instalate pe tableta.<br>*Notă: Aveți posibilitatea să glisați la stânga şi la dreapta pentru a vizualiza ecranele suplimentare.* |
| 4 | Iconuri | Atingeți o pictogramă pentru a deschide o aplicație sau un dosar |

# Despre aplicatii

Pentru a deschide o aplicație, atingeți pictograma aplicației pe ecranul de acasă sau în Ecranul de lansare:

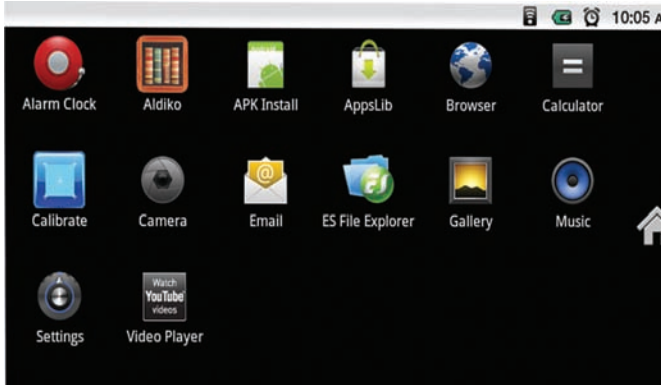


*Ecranul prezentat mai sus este doar pentru motive ilustrative. Ne rezervăm dreptul de a modifica şi de a îmbunătăți lista finală de aplicații disponibile pe tableta..*

## *Aplicatii preinstalate*

Unele aplicații au fost instalate pe tableta dvs. pentru confortul dumneavoastră. Aceste aplicații includ:

Romana

| | |
|---|---|
| | Vizualizati ora curentă sau setati o alarmă. |
| | Descărcati şi cititi mii de e-carti. Acceptă standardul ePub. |
| | Cautati şi afişati fişierele de tip APK instalate pe tableta. |
| 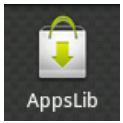 | Căutati, descărcati şi instalati aplicaţii de la magazinul AppsLib. |
| | Navigati prin internet. |
| | Efectuati operaţii matematice simple. |
| | Faceti fotografii sau inregistrati clipuri video cu camera video frontală. |

| | |
|---|---|
|  | Verificati emailurile. |
| | Vizualizati fotografii si redati clipuri video. |
| | Redare muzica. |
| | Accesati meniul Setări pentru a ajusta opţiunile tabletei. |
| | Lansati pagina de browser mobil YouTube ™ pentru a viziona clipuri video pe internet. |
| | View and manage files stored on the tablet.<br>Visit http://www.estrongs.com/en/products/file-explorer.html for more information. |
| | Turn off background apps to conserve battery power.<br>Visit http://www.estrongs.com/en/products/task-manager.html for more information. |

### *Instalarea aplicatiilor*

Puteți descărca de asemenea si instalați aplicații suplimentare de la AppsLib, browser-ul web, sau alte surse. Tableta trebuie să fie setata pentru a permite instalarea de aplicații din surse non-market. Optiunea de Surse Necunoscute poate fi setată în meniul **Setări aplicații**.

*Suportul pentru aplicații terțe părți este asigurat de dezvoltatorii respectivelor aplicații. Nu suntem responsabili pentru comportamentul acestor aplicatii; vă rugăm să citiți descrierea şi termenii de utilizare oferite de către dezvoltatori terți cu atenție înainte de a instala aplicații pe tableta.*

# Despre Meniuri

Exista 2 tipuri de meniuri folosite de tableta.

**1. Opțiunea meniuri.**

Meniurile opțiuni conțin elemente legate de ecranul curent sau aplicație. Pentru a vizualiza un meniu de opțiuni, apăsați tasta Meniu.

*Nu toate ecranele sau aplicatile au un meniu de opțiuni; în cazul în care un meniu nu exista, nimic nu se va întâmpla dacă apăsați tasta* **Meniu**.

**2. Context meniuri.**

Meniuri contextuale conțin elemente legate de un anumit element de pe ecran. Pentru a vizualiza un meniu context, atingeți şi apăsat pe un element de pe ecran.

Atingeti si tineti apasat Video(3).

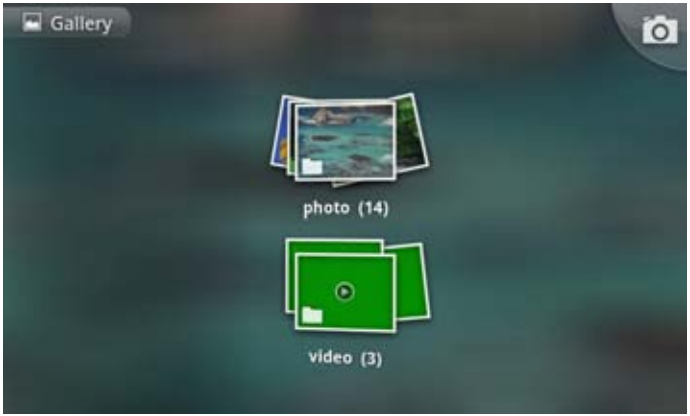


Un meniu contextual va apărea.

*Nu toate elementele au un meniu context, în cazul în care un meniu nu exista, nimic nu se va întâmpla dacă țineți apăsat elementul.*

# Despre Notificări

Pictogramele care apar în Bara de notificare, în partea superioară a ecranului, vă avertizează atunci când sosesc noi mesaje sau alarme sau alte evenimente care au loc.

Vizualizati şi răspundeti la notificări prin deschiderea completă panoul Notificări.

- Trageți de bara de notificare în jos în partea de jos a ecranului pentru a deschide panoul Notificări de la orice ecran, sau pe ecranul de întâmpinare, apăsați tasta Meniu şi apoi atingeți Notificări pentru a deschide panoul Notificări.

1. **Pentru a răspunde la o notificare:**

Atingeti o notificare în listă; panoul cu Notificări se va închide şi aplicatia asociata cu notificarea se va lansa.

2. **Pentru a şterge toate notificările:**

Atingeti butonul anulare in partea din dreapta sus a panoului notificărilor; panou se va închide şi toate notificările vor fi şterse.

3. **Pentru a închide panoul Notificări:**

- Trageți de partea de jos a panoului Notificări spre partea de sus a ecranului, sau
- Apăsați pe tasta Înapoi.

# Conectarea la Internet

Aceasta tableta poate utilize retelele Wi-Fi pentru conectarea la Internet. Tehnologia wireless Wi-Fi poate oferi acces la Internet la distanțe de peste 300 de metri, cu toate acestea, această distanță poate fi afectată de mediul dvs. înconjurător şi de router-ul Wi-Fi.

## Cerinte

În scopul de a va conecta la Internet, veți avea nevoie de următoarele:

1. **Un router wireless sau un punct de acces cu o conexiune la Internet de bandă largă**

Router-ul fără fir trebuie să accepte conexiuni Wi-Fi 802.11b / g. În cazul în care routerul suporta 802.11n, asigurați-vă că a fost configurat pentru 802.11b ACC qept / g.

*O viteza de conectare minimă de 64 Kbps este recomandată. Viteze mai mari vor permite o experiență mai bună pe Internet.*

2. **Setările de rețea fără fir router**

Va trebui să ştiți numele de rețea (SSID), precum şi parola sau alte acreditări dacă rețeaua este securizată. Aceste setări pot fi de obicei găsite pe pagina de administrare a router-ului. Va rugam sa va consultați documentația router-ului wireless pentru ajutor, sau întrebați administratorul de rețea pentru detalii.

*Ați putea întâlni rețele Wi-Fi deschise, sau puncte "hot spot". Aceste rețele sunt, de obicei, configurate astfel încât să vă puteți conecta pur şi simplu fara a fi nevoie să ştiti setările respective; tableta va obține toate informațiile de care are nevoie în mod automat de la router.*

# Conectarea la o rețea Wi-Fi

Bara de Notificare afişează pictograme care indică starea Wi-Fi a tabletei dvs..

| | |
|---|---|
| | Notificarea că o rețea deschisă Wi-Fi este în rază. |
| | Conectat la o rețea Wi-Fi (unde se indica puterea conexiunii). |
| [fara icon] | Nu există rețele Wi-Fi în raza de acțiune, sau Wi-Fi radio este oprit. |

1. **Porniți radio Wi-Fi dacă nu este deja pornit. Pentru a activa Wi-Fi:**

   a. Du-te la ecranul de întâmpinare:

      Apăsați tasta Acasa.

   b. Deschideți meniul Setări:

      Apăsați tasta Meniu, apoi atingeți Setari.

   c. Deschideți meniul de Wi-Fi si rețele:

      Atingeti WiFi & Retele.

   d. Deschideți meniul de setari Wi-Fi:

      Atingeti Setari Wi-Fi.

   e. Asigurați-vă că opțiunea Wi-Fi este activata: Atingeti Wi-Fi.

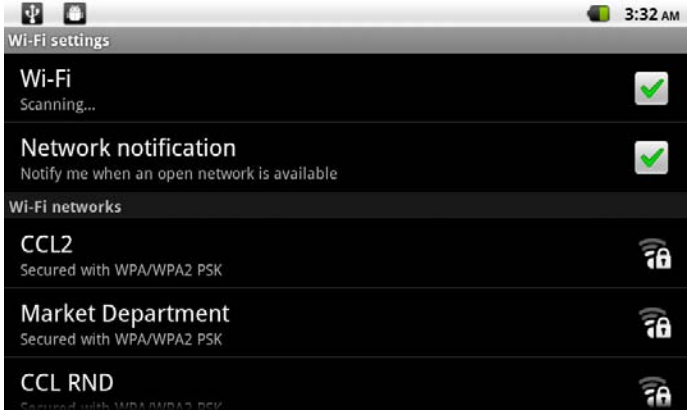


Când Wi-Fi este pornita, tableta va căuta şi va afişa o listă de rețele Wi-Fi.

*Dacă o rețea la care v-ați conectat anterior se găseşte, tableta se va conecta la acesta. Dacă nu vedeți rețeaua în listă, puteți forța tableta sa scaneze din nou. Pentru a scana rețelele, apăsați tasta Meniu, şi apoi atingeți Scanare.*

Romana

**2. Selectați o retea disponibile Wi-Fi pentru conectarea la:**

În acelaşi meniul Wi-Fi de setările de mai sus, atingeți o rețea din listă. Dacă rețeaua este deschisa, tableta vă va solicita să confirmați conexiunea la rețea. Atingeți Conectare pentru a confirma. Dacă rețeaua este securizată (cum este indicat de o pictogramă Blocare), tableta vă va solicita să introduceți o parolă sau alte acreditări. Atingeți caseta parola wireless pentru a afişa tastatura de pe ecran şi apoi utilizați pentru a introduce parola. Atingeți Conectare pentru a confirma.

Când v-ați conectat cu succes la o rețea Wi-Fi, bara de Notificări din partea de sus a ecranului va afişa un indicator de semnal Wi-Fi.

*Pentru a afla mai multe despre cum să adăugați o rețea Wi-Fi atunci când nu este în raza de acțiune sau în cazul în care router-ul este setat pentru a ascunde numele rețelei (SSID), sau pentru a configura opțiunile avansate de Wi-Fi, vă rugăm să consultați manualul.*

# Navigarea Pe Internet:

Navigare cu ajutorul aplicației Browser vă permite să accesați pagini Web şi sa găsiti informații pe web. Tine-ti pasul cu ştirile, prietenii, sau bucurați-vă de clipurile video de pe YouTube ™.

Ptr. folosirea aplicatiei Browser, tableta trebuie să fie conectata la Internet. Citiți secțiunea “Conectarea la Internet” pentru a învăța cum să va conectati Internet.
Ptr. a deschide aplicatia Browser, atingeți pictograma Browser de pe ecranul de întâmpinare sau în Ecranul de lansare.

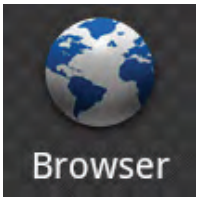

| | Nume | Descriere |
|---|---|---|
| 1 | Bara de adresa | Afişează adresa (URL) a paginii curente. Atingeți bara de adresa pentru a introduce o nouă adresă sau ptr. a cauta pe web. |
| 2 | Icon Bookmark | Atingeți pictograma Bookmark pentru a adăuga sau pentru a vizualiza marcaje, pentru a vizualiza site-urile cele mai vizitate, sau pentru a vizualiza istoricul browser-ului. |

Unele acțiuni comune Browser sunt descrise mai jos.

✦ **Pentru a merge la o pagină Web.**

| | |
|---|---|
| 1. Atingeți bara de adrese din partea de sus a ecranului Browser. Tastatura se va deschide automat. (În cazul în care bara de adrese nu este vizibila, glisați pagina în jos pentru a reveni la partea de sus a ecranului Browser.) | |
| 2. Utilizați tastatura pentru a introduce adresa (URL) a paginii Web (de exemplu, m.youtube.com. | |
| 3. Atingeti Mergeti pentru a deschide pagina de web. | |

✦ **Pentru a marcaj o pagină Web.**
Marcati paginile Web favorite pentru a le vizita rapid fără a introduce un URL.

| | |
|---|---|
| 1. Du-te la pagina Web pe care doriți să marcati | 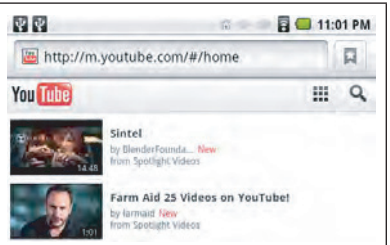 |
| 2. Atingeți picto-grama Bookmark la dreapta de bara de adrese. | |
| 3. Atingeți tasta Adăugare. | 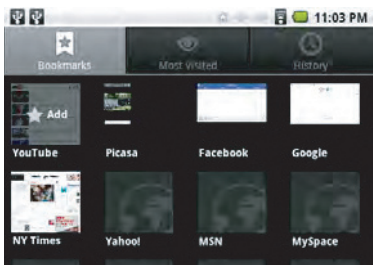 |

| | |
|---|---|
| 4. Dacă doriți, puteți modifica numele de marcaj sau locația sa (adresa URL). În caz contrar, atingeți OK pentru a finaliza adăugarea marcajului. | 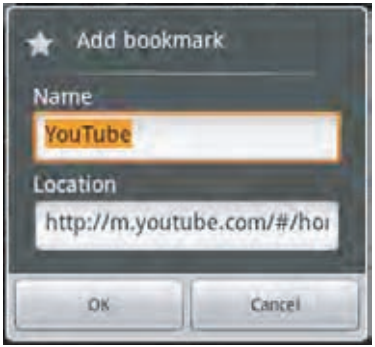 |

✦ **Pentru a merge la o pagină Web marcată.**

| | |
|---|---|
| 1. Atingeți pictograma Bookmark la dreapta de bara de adrese. | |
| 2. Atingeți o tasta marcaj pentru a o deschide. | 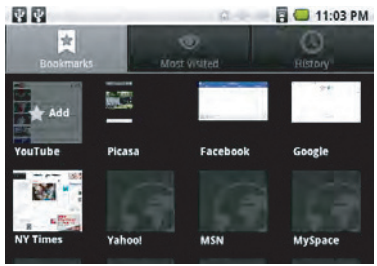 |

✦ **Pentru a deschide o nouă fereastră de browser.**

| | |
|---|---|
| 1. Apăsați tasta Meniu pentru a afişa opțiunile browser. | |
| 2. Atingeți Fereastra Noua pentru a deschide o nouă fereastră de browser. | |

✦ **Pentru a comuta între ferestrele de browser.**

| | |
|---|---|
| 1. Apăsați tasta Meniu pentru a afişa opțiunile browser. | |
| 2. Atingeți Windows pentru a afişa o listă de ferestre de browser deschise. | |
| 3. Atingeți numele unei ferestre pentru a comuta la ea, sau atingeți “x” pentru a închide fereastra. | |

# Gestionarea Aplicațiilor

Descărcarea şi instalarea de noi aplicații pentru tableta poate extinde funcționalitatea în mai multe moduri.



Puteți descărca şi instala aplicații din marketul AppsLib inclus.

Pentru a deschide marketul AppsLib:

1. Atingeți pictograma Launcher.
2. Atingeți pictograma AppsLib.

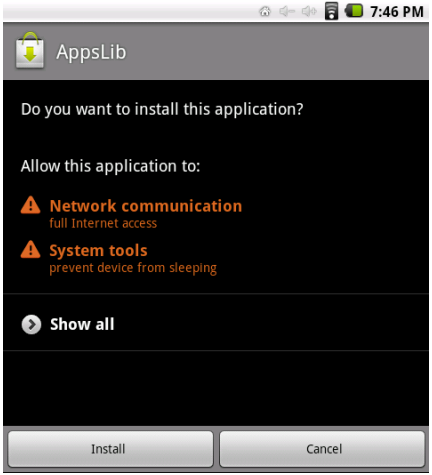


Atunci când instalați o aplicatie, acesta vă va spune ce funcții ale tabletei le va controla şi, dacă are nevoie de acces la datele dvs. Asigurați-vă că veti revizui aces-tor cerințe de acces cu atenție înainte de finalizarea instalării.

*Atentie în special cu aplicatiile care solicita acces la mai multe funcții sau la o cantitate semnificativa de date. Sunteți responsabil pentru aplicațiile instalate pe tableta dvs.*

- Puteți afla mai multe despre AppsLib, şi răsfoi aplicații vizitând site-ul lor la www.appslib.com.

*Unii dezvoltatori vă permit să descărcati şi instalati aplicații direct de pe site-ul lor.*

*Suportul pentru aplicațiile de la terți este oferit de dezvoltatorul aplicațiilor respective. Nu suntem responsabili pentru comportamentul acestor cereri; vă rugăm să citiți descrierea şi termenii de utilizare oferite de către dezvoltatorii terți cu atenție înainte de a instala aplicații pe tableta.*

**Pentru a dezinstala o aplicație:**

1. Din ecranul Acasa, tastati tasta Meniu.
2. Tastati Setari ptr. a deschide meniul Setari.
3. Tastati Aplicatii apoi tastati Gestionare aplicatii ptr. a afisa o listata a aplicatiilor instalate pe tableta.

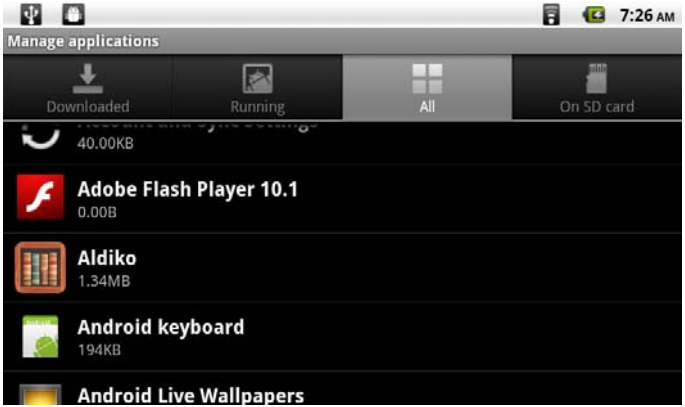

4. Atingeți numele aplicației pe care doriți să o dezinstalați. Ecranul Informatii aplicatie se va deschide.

5. Tastati Dezinstalare. Tableta va va solicita să confirmați.

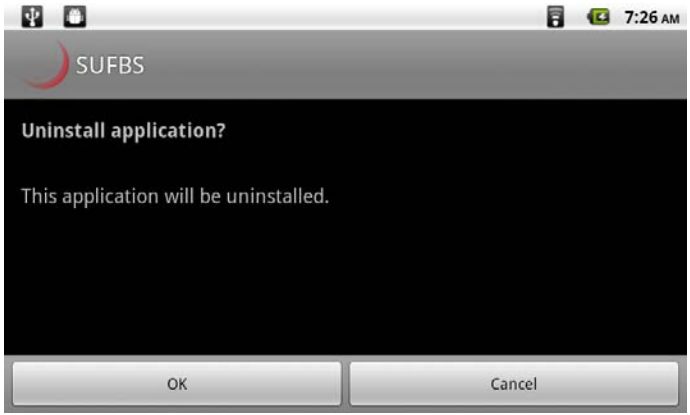


6. Tastati OK ptr. a dezinstala aplicatia.

# Conexiuni Optionale

## Conectarea la un calculator PC

Conectati tableta la un computer pentru a transfera fişiere.

1. **Conectati tableta la un computer**

Cu ajutorul cablului USB inclus:

- Conectați capătul mic al cablului în conectorul USB 2.0 Hi-speed al tabletei.
- Conectați capătul mare al cablului într-un port USB 2.0 Hi-speed pe computer.

2. **Când tableta este conectata, o pictogramă USB va apărea în bara de notificare.**

Trageți de bara de notificare în jos pentru a deschide panoul de notificări.

3. **Montati driverul de stocare.**

- Atingeti USB conectat (intern) pentru a monta tabletei driverul de stocare, apoi atingeți Montati când vi se solicită pentru a confirma. Atunci cand este montat, aveți posibilitatea să copiați fişiere pe / de pe computer
- În cazul în care un card de memorie este instalat, atingeti USB conectat (extern) pentru a monta cardul, apoi atingeți Montati când vi se solicită pentru a confirma. Atunci cand este montat, aveți posibilitatea să copiați fişiere de la / de la computer la aceasta.

Tableta dvs. va fi recunoscuta de calculator ca o unitate de stocare detaşabilă. Trageti si mutati fişiere între tableta şi computer. Pentru a afla mai multe despre copierea fişierelor, vă rugăm să consultați documentația inclusă cu computerul sau sistemul de operare.

# Conectarea la TV

Conectati la un televizor pentru a vă bucura de tableta din confortul sufrageriei dumneavoastră. Un cablu HDMI (Tip Cla Tip A) este necesar pentru a conecta tableta la un televizor. Înainte de a conecta tableta la televizor, va trebui să efectuati câteva setări de afişare.

- Asigurați-vă că tableta este setata ptr. ieşire HDMI
- Pentru performanțe vizuale optime, asigurați-vă că rezoluția de ieşire video de pe tableta se potriveste cu performantele televizorului dvs.

**Pentru a regla setările de afişare:**

1. Din ecranul de început, apăsați tasta Meniu, şi apoi atingeți Setari pentru a afişa meniul de setări.
2. Atingeți Afişare pentru a afişa setările de afişare.
3. Atingeti HDMI, şi apoi atingeți o opțiune de rezoluție care se potriveşte cu performantele televizorului dvs:
    a. Alegeți 1080P dacă televizorul este capabil să afişeze video 1080p.
    b. Alegeți 720P dacă televizorul este capabil de afişarea 720p sau 1080i video.

**Pentru a conecta tableta la TV:**

1. Conectați capătul mic al cablului în conectorul HDMI mini HDMI a tabletei.
2. Conectați capătul mare al cablului HDMI la portul HDMI la TV.
3. Porniți televizorul şi setați modul de afişare la portul HDMI care este conectat la tableta.

Display tabletei va fi de afisat pe ecranul televizorului.

*Dacă aveți nevoie de ajutor ptr. a seta modul de afişare a televizorului, vă rugăm să consultați documentația furnizată de către producător TV.*

*Dacă nu există nici un sunet din tableta pe televizor, poate fi necesar să setati comutatorul de sunet HDMI.*

# Conectarea Căştilor

Conectati o pereche de căşti la tableta pentru a vă bucura de media fara a-i deranja pe cei din jur. Reglati volumul auditiei pe tableta mai mic înainte de a conecta căştile, apoi mariti încet volumul la un nivel confortabil de ascultare.

- Căştile trebuie să aibă o mufă de 3,5 mm (1 / 8).
- Atunci când căştile sunt conectate, difuzorul va fi dezactivat în mod automat.

*Experții ORL avertizează împotriva folosirii constante a stereofonie la un volum ridicat. Expunerea constantă la volume ridicate poate duce la pierderea auzului.*

# Utilizarea Adaptorului USB

Adaptorul USB poate fi folosit pentru a conecta şi utiliza dispozitivele USB cu tableta. Adaptorul converteşte portul mini USB de pe tableta într-un conector USB On-the-Go (OTG).

## *Conectarea unei tastaturi*

Pentru momentele în care doriți să tastați pentru o perioadă mai lungă de timp, conectați o tastatură normala la tableta. Utilizați conectorul USB OTG inclus pentru conectarea unei tastaturi la tableta.

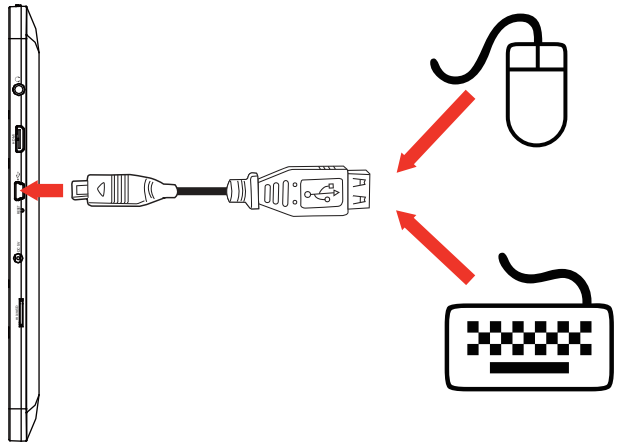

*Puteți folosi, de asemenea, această conexiune pentru a adăuga un mouse la tableta. Adaptorul acceptă o singura conexiune la un moment dat. Pentru a utiliza o tastatură şi mouse-ul în acelaşi timp, va trebui să adăugați un hub USB extern.*

## *Conectarea unui dispozitiv de stocare*

Utilizați conectorul USB OTG inclus pentru a conecta un dispozitiv de stocare (de exemplu, o memorie USB flash drive).

*Această conexiune suporta o memorie de stocare de max. 4 GB. Pentru o capacitate suplimentară de stocare, un card microSD poate fi adăugat la tableta.*

# Setarea opțiunilor de sistem

Deschide meniul de setare sistem pentru a ajusta modul în care arată tableta şi funcțiile din meniu.

*Multe aplicații vor avea setările lor proprii; verificati documentația furnizată de către dezvoltatorul de aplicații pentru a afla mai multe.*

Setările sunt grupate pe categorii. Atingeți o categorie pentru a deschide şi a regla setările acesteia.

*Vă rugăm să consultați manualul pentru o descriere a elementelor din meniul Setari.*

Pentru a deschide meniul Setări:

1. Din ecranul Acasa, apasati tasta Meniu.
2. Atingeți Setări pentru a deschide meniul Setări.

# Specificatii

Vă rugăm să vizitați www.allview.ro pentru cele mai recente informații despre produs.



| | |
|---|---|
| **Procesor** | Cortex A8 (1 GHz) |
| **RAM** | 512 MB DDR3 |
| **Memorie** | 4GB integrata<br>slot card microSD (suporta max. 32GB) |
| **Display** | 10.1" TFT LCD (1024 x 768), touchscreen capacitiv |
| **Retea Wi-Fi** | IEEE 802.11 b/g |
| **Iesire Video** | Mini HDMI, tip C (suporta 1080p si 720p) |
| **Iesire Audio** | Jack casti 3.5 mm |
| **Interfata PC** | USB 2.0 Hi-speed |
| **Caracteristici suplimentare** | Camera frontala (0.3 MP)<br>Miicrofon incorporat<br>Difuzoare Stereo |
| **Sistem de operare** | Android™ 2.3 |
| **Alimentare** | Acumulator Li-polimer, Adaptor priza |

# Note de siguranță

Fulger cu simbolul sageata într-un triunghi echilateral este destinat să alerteze utilizatorul de prezenţa de tensiuni periculoase în cadrul incintei produsului, care pot fi de mărime suficientă pentru a constitui un risc de electrocutare.

Semnul de exclamare într-un triunghi echilateral este destinat să alerteze utilizatorul de prezenţa instrucţiunilor de service în literatura de specialitate, care însoţeşte aparatul.

**Pentru utilizare Client:**
Introduceţi mai jos numărul de serie care se află pe partea din spate a aparatului. Păstraţi această informaţie pentru referinţe viitoare.

Model nr. _____

Serial nr. _____

**AVERTISMENT:** Pentru a preveni riscul de incendiu sau electrocutare, nu expuneţi acest dispozitiv la ploaie sau umezeală. Tensiune inalta periculoasa este prezentă în interiorul incintei. Nu deschideţi carcasa.

**Notă:** Dacă produsul nu mai raspunde comenzilor sau se opreste brusc, o descărcare electrostatică poate fi cauza. În această situaţie, vă rugăm să urmaţi procedurile de recuperare de mai jos: Opriţi unitatea apăsând şi menţinând apăsat butonul de oprire din stinga. Porniţi tableta din nou

Acest echipament a fost testat şi respectă limitele pentru dispozitivele din clasa B digitale, în conformitate cu Partea 15 a regulilor FCC. Aceste limite sunt concepute pentru a oferi protecţie rezonabilă împotriva interferenţelor dăunătoare într-o instalaţie rezidenţială. Acest echipament generează, utilizează şi poate radia energie de frecvenţă radio şi, dacă nu este instalat şi utilizat în conformitate cu instrucţiunile, poate cauza interferenţe dăunătoare comunicaţiilor radio.

Cu toate acestea, nu există nici o garanţie că nu vor apărea interferenţe într-o anumită instalaţie. Dacă acest echipament cauzează interferenţe dăunătoare cu recepţia radio sau de televiziune, care pot fi determinate prin pornirea şi oprirea echipamentului, utilizatorul este încurajat să încerce să corecteze interferenţa prin una sau mai multe dintre următoarele măsuri:

Reorientarea sau repoziţionarea antenei de recepţie. Măriţi distanţa dintre echipament şi receptor. Conectaţi echipamentul la o priză aflată pe un circuit diferit de cel la care este conectat receptorul. Consultaţi distribuitorul sau un tehnician radio / TV pentru ajutor

## Instrucțiuni de siguranță importante

1. Citiți instrucțiunile: Toate instrucțiunile de siguranță şi de exploatare ar trebui să fie citit înainte ca produsul să fie operat..

2. Păstrați Instrucțiunile: instrucțiunile de utilizare ar trebui să fie păstrate pentru referință viitoare.

3. Atenție Avertismente: Toate avertismentele de pe produs şi din instrucțiunile de operare ar trebui să fie respectate.

4. Urmați instrucțiunile: Toate instrucțiunile de operare şi de utilizare ar trebui să fie urmate.

5. Curățarea: Deconectați acest produs de la priza de perete înainte de curățare. Nu utilizați lichide de curățare sau aerosoli. Utilizați o cârpă umedă pentru curățare.

6. Accesorii: Folosiți numai accesoriile recomandate de producător. Utilizarea de alte dispozitive poate fi periculoasa.

7. Apa şi umezeala: Nu utilizați acest produs în apropierea apei (de exemplu, lângă o cadă de baie, chiuveta, cada de rufe, în subsoluri umede, sau lângă o piscină şi altele similare).

8. Ventilație: Deschiderile din carcasă sunt prevăzute pentru ventilație pentru a asigura funcționarea fiabilă a produsului şi pentru al proteja de supraîncălzire. Aceste deschideri nu trebuie blocate prin plasarea produsului pe un pat, canapea, covor, sau alte suprafețe similare. Acest produs nu ar trebui să fie plasat într-o bibliotecă sau un raft excepția cazului în care se asigură o ventilare sau instrucțiunile producătorului au fost respectate.

9. Surse de alimentare: Acest produs trebuie alimentat doar cu de tipul de sursă de alimentare indicat pe eticheta produsului.

DECLARATIE DE CONFORMITATE

Nr.1264 / 14.11.2011

Noi Visual Fan SRL, cu sediul social in Brasov, Str Brazilor nr61, 500313 Romania, inregistrata la Reg. Com. Brasov sub nr. J08/818/2002, CUI RO14724950, in calitate de importator, asiguram, garantam si declaram pe proprie raspundere, conform prevederilor art. 5 HG nr.1.022/2002 privind regimul produselor si serviciilor care pot pune in pericol viata sanatatea, securitatea muncii si protectia muncii ca produsul ALLDRO3, tablet PC marca ALLVIEW, precum si accesoriile ce il insotesc (incarcator priza, cablu USB, casti) nu pune in pericol viata, sanatatea, securitatea muncii, nu produce impact negativ asupra mediului si este in conformitate cu:

-Directiva privind echipamente radio si de telecomunicatii R&TTE 1999/5/CEE (HG 88/303)

-Directiva privind asigurarea utilizatorilor de echipamente de joasa tensiune 73/32/CEE , modificata de Directiva 93/68/CEE (HG457/2003)

-Directiva cu privire la compatibilitatea electromagnetica 89/336/CEE, modificate de Directiva 92/31/CEE si 93/68/CEE (HG497/2003)

Produsul a fost evaluat conform urmatoarelor standarde:

-Sanatate EN 50360, EN 50361

-Siguranta EN 6095-1

-EMC EN 301 489-1/-7/-17

-Spectru radio EN 301511, EN 300328

Produsul are aplicat marcajul CE.

Procedura de evaluare a conformitatii a fost efectuata in conformitate cu prevederile Anexei II a HG nr. 88/2003, documentatia fiind depozitata la SC Visual Fan SRL, Brasov str. Brazilor nr.61, 500313.

Declaratia de conformitate este disponibila la adresa www.allview.ro

Brasov

DIRECTOR,
COTUNA GHEORGHE

# Table of Contents


**THANK YOU ..... 40**
Package Contents ..... 40
Features ..... 41

**GETTING TO KNOW THE ALLDRO3 ..... 42**
About the Touchscreen ..... 45
Protective Film ..... 45
Touchscreen Actions ..... 45
About the Orientation Sensor ..... 47
Charging the Tablet ..... 47
Inserting a Memory Card ..... 47

**GETTING STARTED ..... 49**
Turning the Tablet on and off ..... 49
Turning the Screen On and Off (Standby) ..... 50
Unlocking the Screen ..... 50
Home Screen at a Glance ..... 51
About Applications ..... 52
Preinstalled Applications ..... 53
Installing Applications ..... 54
About Menus ..... 54
About Notifications ..... 56

**CONNECTING TO THE INTERNET ..... 57**
Requirements ..... 57
Connect to a Wi-Fi network ..... 58

**BROWSING THE WEB ..... 60**

**MANAGING APPLICATIONS ..... 64**

**OPTIONAL CONNECTIONS ..... 67**
Connecting to a Computer ..... 67
Connecting to a TV ..... 68
Connecting Headphones ..... 69
Using the USB Full-Size Adapter ..... 70
Connecting a Keyboard ..... 70
Connecting a Storage Device ..... 70

**SETTING THE SYSTEM OPTIONS ..... 71**

**SPECIFICATIONS ..... 72**

**SAFETY NOTICES ..... 73**


English

# Thank You

Congratulations on your purchase of a ALLDRO3 Internet Tablet. This guide is provided to help you get started quickly with your player; please read it carefully and save it for future reference.

For detailed instructions, up-to-date information, and helpful tips, please visit the ALLVIEW website at www.allview.ro.

*The manual is available for download from the ALLVIEW website as a PDF file.*

*To view PDF documents, download and install the free Adobe Acrobat reader from the Adobe website at www.adobe.com.*

## Package Contents

Please make sure that the items shown below are included in the package. Should an item be missing, please contact the local retailer from which you purchased this product.

- ALLDRO3 Internet Tablet
- Protective pouch
- USB cable
- USB host/keyboard adapter
- Professional stereo Earphones
- Power adapter

*This package may contain plastic bags or other materials that pose a hazard to children. Be sure to safely dispose of all packing materials after opening.*

# Features

- Browse the Web.
  Visit your favorite websites
- Check your e-mail
  Keep in touch with friends and family
- Watch YouTube™ videos
  Browse the world's most popular video-sharing community
- Read your favorite books
  Download thousands of books with the included Aldiko E-book reader *
- Discover thousands of apps for Android™
  Download apps from GetJar —the marketplace designed for tablets
- Connect to the Internet wirelessly
  High-speed Wi-Fi 802.11 b/g networking
- HDMI™ output to your TV **
  Enjoy videos, photos and more in the comfort of your living room
- Enjoy your media library anywhere
  Portable powerhouse plays popular music, video, and photo formats
- microSD memory card reader
  Increase your storage capacity (up to 32 GB supported)
- Built-in camera
  Convenient front-facing camera
- Automatic orientation detection
  Read any way you want; the display adjusts automatically!

* Reading books in the ePub format requires the included Aldiko E-book reader application.

** Requires optional HDMI cable (Type A-to-Type C). 1080p HD video playback requires a video file encoded at 1080p. Streaming video quality will be affected by the source, and the quality and condition of your network connection.

# Getting To Know The Alldro3

## Unit at a Glance

| Name | | Description |
|---|---|---|
| 1 | Volume - key | Press to decrease the volume level. |
| 2 | Volume + key | Press to increase the volume level. |
| 3 | Power key | Press to turn the unit on, or to turn the screen on and off.<br>Press and hold to access the Power Off menu. |
| 4 | Speakers | Stereo speakers. |

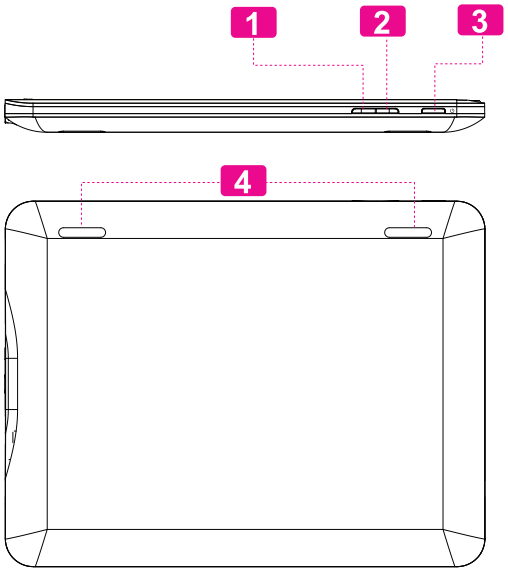

| | Name | Description |
|---|---|---|
| 5 | **Menu** soft Key | Tap to view the option menu.<br>*Note: When you Tap the **Menu** key from within an application, you will see the options for that application. To view the Android system options, tap the **Menu** key from the home screen.* |
| 6 | **Home** soft key | Tap to return to the home screen.<br>Tap and hold to view a list of recently used applications; touch an application in the list to launch it. |
| 7 | **Back** soft key | Tap to return to the previous screen. If the keyboard is on the screen, tap to close the keyboard. |
| 8 | Camera | Front-facing camera |

| | Name | Description |
|---|---|---|
| 9 | microSD card slot | Load external microSD memory cards here. |
| 10 | Power jack (DC input) | Charge and power the tablet with the included power adapter. |
| 11 | **Reset** key | Press to reset the tablet if it freezes or otherwise behaves abnormally. (Use a paperclip or other small object to gently press this key.) |
| 12 | USB 2.0 Hi-speed port | Connect to a computer to transfer data (e.g., music, videos, photos, files). |
| 13 | HDMI jack (mini Type C) | Connect to a TV or other display. |
| 14 | Headphone jack | Audio output connection for headphones.<br>*Note: Speaker output is automatically disabled when headphones are connected to the player.* |

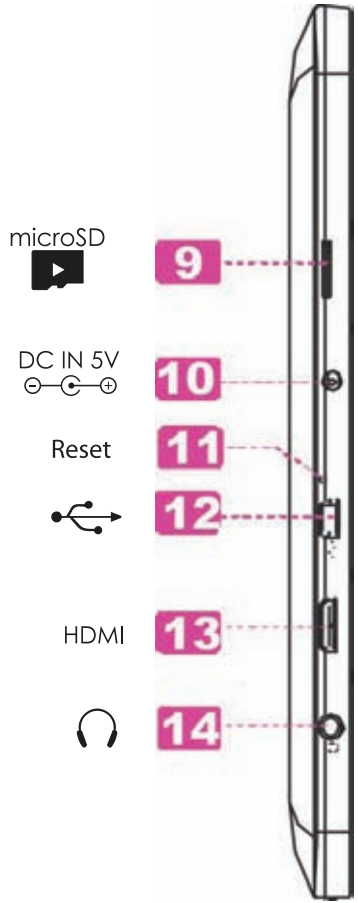

# About the Touchscreen

Your tablet comes equipped with an easy-to-use touch-screen which allows access to the tablet's functions. Use your finger tip to touch the area of the screen where a control icon is displayed. If you touch and hold the screen, it will register as a continuous button press.

*To avoid damaging the screen, do not touch it with excessive force or with any object other than your finger. For best response, make sure your hands are clean before using the touch-screen controls.*

## *Protective Film*

A thin film has been applied to the touchscreen to protect it during shipping. The protective film should be removed before use. To remove it, simply take a corner of the film and peel it away from the screen.

## *Touchscreen Actions*

You can control the functions of the tablet by using the touchscreen in combination with the three touch keys located on the bezel. To control the tablet with the touchscreen, use your fingertip to manipulate icons, buttons, menu items, the on-screen keyboard, and other items displayed on the screen.

You can perform the following actions on the touchscreen using your fingertip.

| | |
|---|---|
| **Touch:** | To activate an on-screen item (e.g., application icons, buttons, menu items, and the letter/symbols of the on-screen keyboard), simply touch them with your fingertip. |
| **Touch and Hold:** | Some on-screen items have an alternate action if you touch and hold it (e.g., opening an alternate menu, or to activate the drag function). To touch and hold an item, touch the item and do not lift your fingertip until the action occurs. |

English

| | |
|---|---|
| **Drag:** | Drag an on-screen item to change its position (e.g., an application icon on the home screen).<br>To drag an item, touch and hold it for a moment, then without lifting your fingertip, move your fingertip on the screen until the item reaches its target destination. |
| **Swipe:** | Swipe up/down on the screen to scroll through a list. On some screens, you may be able to swipe left/right to change the view.<br>To swipe, touch the screen and then quickly move your fingertip across the screen without lifting your fingertip. Do not pause on the screen with your fingertip at the initial point of contact or you may accidentally drag an item instead. |
| **Double-tap:** | Quickly tap the screen twice on a webpage or other application screen to zoom (the application must support the double-tap/zoom function). Within the browser, double-tapping a web-page section will cause the browser to zoom and fit that section to the width of the screen. |

# About the Orientation Sensor

The tablet contains a sensor that will automatically change the orientation of most screens as you rotate the tablet. The sensor works best when the tablet is rotated perpendicular to the ground (i.e., when the tablet is held upright and not fat on its back).

The orientation sensor can be turned on and off in the **Display** settings menu.

# Charging the Tablet

The tablet comes with a built-in rechargeable lithium-polymer battery.

Before using the tablet, the battery should be charged fully. The Status Indicator will light blue when the battery is charged fully.

To charge the battery:

1. Plug one end of the included power adapter into an AC 100-240V outlet.
2. Plug the other end of the included power adapter into the Power jack on the tablet.
3. Disconnect the power adapter when the tablet is fully charged.

*The battery used in this device may present a fire or chemical burn if mistreated. Do not disassemble, incinerate, or heat the device. Do not leave the de-vice in a place subject to direct sunlight, or in a car with its windows closed. Do not connect the device to a power source other than that which is indicated here or on the label as this may result in the risk of fire or electric shock.*

# Inserting a Memory Card

The tablet accepts microSD memory cards. Insert a memory card into the microSD card slot to:

- Increase the memory capacity of your tablet
- Play media files stored on the memory card (e.g., music, video, or photo files).

**To insert a memory card:**

1. Align the memory card with the card slot. The metal contacts of the memory card should face down away from the LCD screen.
2. Slide the card into the spring-loaded slot. Push the card in until it clicks into place.

*Do not attempt to insert objects other than a microSD memory card into the card slot. A compatible memory card should fit easily into the card slot; if you encounter resistance, check the alignment of the card. Do not attempt to force the card in.*

*Avoid touching the gold contacts of the memory card.*

**To release and remove a memory card:**

1. **UNMOUNT the memory card.**

   a. From the home screen, tap the **Menu** key, and then touch Settings to show the settings menu.

   b. Touch **SD card & Device storage** to show the SD card & device storage settings.

   c. Touch **Unmount SD card** to prepare the memory card for safe removal.

2. Push the card further into the slot until you hear a click. The card will spring out of the slot.

3. Grasp the card by its edge to remove it.

*To avoid damage and data corruption, do not remove a memory card while data is being written to or read from the card. For example, do not remove a card while playing a music file stored on the card.*

# Getting Started

## Turning the Tablet on and off

To turn the tablet on:

- Press and hold the **Power** key until the LCD screen turns on. Wait until the Home screen appears; the tablet is now ready for use.

To turn the tablet off:

1. Press and hold the **Power** key until the Device Options menu appears.

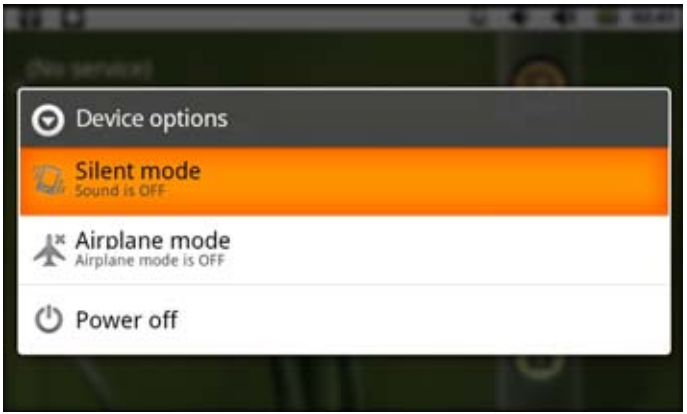


2. Touch **Power off** on the screen. A confrmation message will appear.

3. Touch **OK** to turn off the tablet.

English

## *Turning the Screen On and Off (Standby)*

When the tablet is on, you can turn off the screen to conserve battery power. Simply press the **Power** key once to turn the screen off. Press the **Power** key again to turn the screen back on.

> *To conserve battery power, the screen can be set to turn off automatically when the tablet is not in use (between 15 seconds and 30 minutes). This* **Screen timeout** *option can be found in the* **Display settings** *menu.*

## *Unlocking the Screen*

When the screen turns off, you will have to unlock the screen when you turn it back on.

To unlock the screen, drag the **lock** icon across the screen towards the speaker icon.

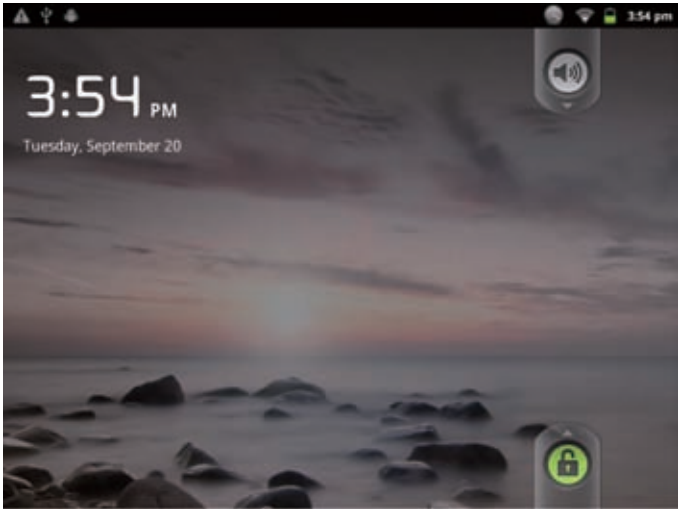

If a password has been set, enter the password to finish unlocking the screen. The Screen Unlock password can be set in the **Location and security** settings menu.

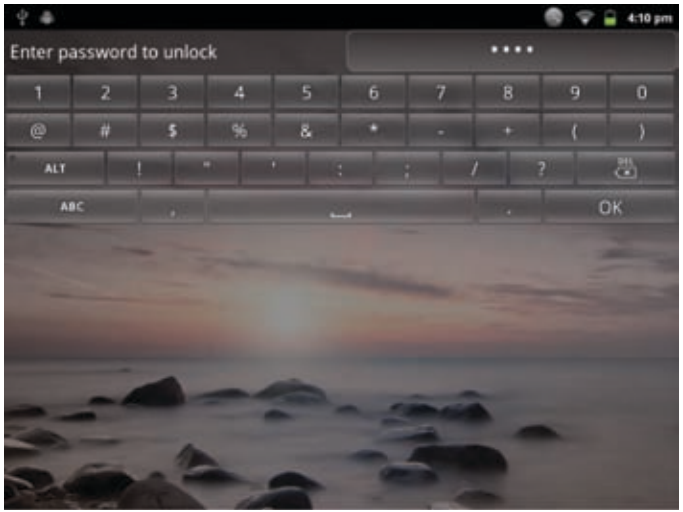


# Home Screen at a Glance

The home screen is the starting point for all of the features of your tablet.

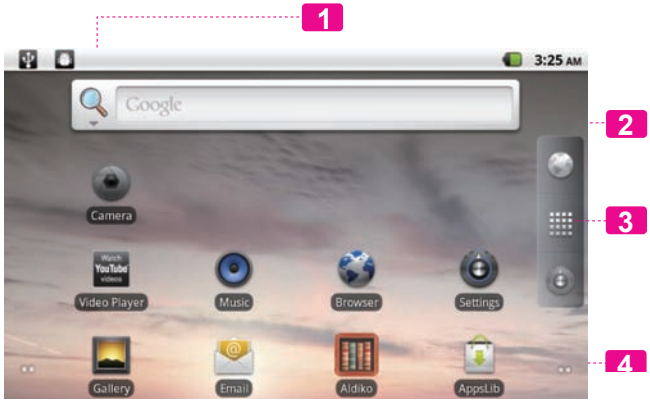


English

| | Name | Description |
|---|---|---|
| 1 | Notification bar | Shows notification icons such as new messages and alarms; drag the bar down to the bottom of the screen to open the full Notifications panel. The right side of the bar also shows status information such as the time, battery level, and network signal strength.<br>*Note: You can press the **Menu** key and then touch **Notifications** to open the full Notifications panel from the Home screen.* |
| 2 | Widgets | Widgets are small applications that you can use directly from the home screen. To add widgets to the home screen, touch and hold an empty spot on the home screen; the **Add to Home screen** menu will appear. Touch **Widgets**; then choose a widget from the menu. |
| 3 | Launcher Tab | Open the Launcher to view a list of all applications installed on the tablet. Touch the Launcher tab to open the Launcher.<br>*Note: You can swipe left and right to view additional screens.* |
| 4 | Icons | Touch an icon to open an application or folder |

# About Applications

To open an application, touch the application icon on the home screen or in the Launcher.

Launcher screen:

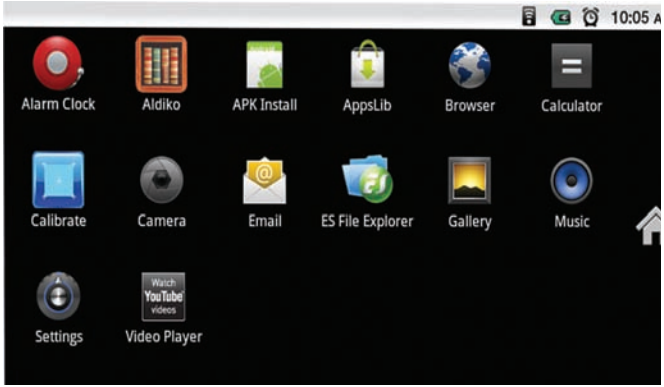


*The screen shown above is for illustrative purposes only. ALLVIEW reserves the right to modify and improve the final list of applications available on the tablet.*

## *Preinstalled Applications*

Some applications have been installed on your tablet for your convenience. These applications include:

| | |
|---|---|
| | View the current time, or set an alarm. |
|  | Download and read thousands of e-books. Supports the ePub standard. |
| | Find and display app installation files (APKs) on your tablet. |
| | Browse for, download, and install applications from the AppsLib store. |
| | Browse the web. |
| | Perform simple mathematical operations. |

| | |
|---|---|
| | Take pictures or videos with the front-facing camera. |
| | Check your e-mail. |
| | View photos and play videos. |
| | Play music. |
| | Access the Settings menu to adjust the tablet's options. |
| | Launch the mobile YouTube™ browser page to watch internet videos. |
| | View and manage files stored on the tablet.<br>Visit http://www.estrongs.com/en/products/file-explorer.html for more information. |
| | Turn off background apps to conserve battery power.<br>Visit http://www.estrongs.com/en/products/task-manager.html for more information. |

English

### *Installing Applications*

You can also download an install additional applications from AppsLib, the web browser, or other sources.

The tablet must be set to allow installation of applications from non-Market sources. The Unknown sources option can be set in the **Application settings** menu.

*Support for third-party applications is provided by their respective applications developers. ALLVIEW is not responsible for the behavior of these applications; please review the description and terms of use provided by third-party developers carefully before installing applications on your tablet.*

# About Menus

There are two types of menus used by the tablet.

**1. Option menus.**

Option menus contain items related to the current screen or application. To view an option menu, press the **Menu** key.

*Not all screens or applications have an option menu; if a menu does not exist, nothing will happen if you press the* **Menu** *key.*

**2. Context menus.**

Context menus contain items related to a specific item on the screen. To view a context menu, touch and hold an item on the screen.

Touch & hold **Video(3)**.

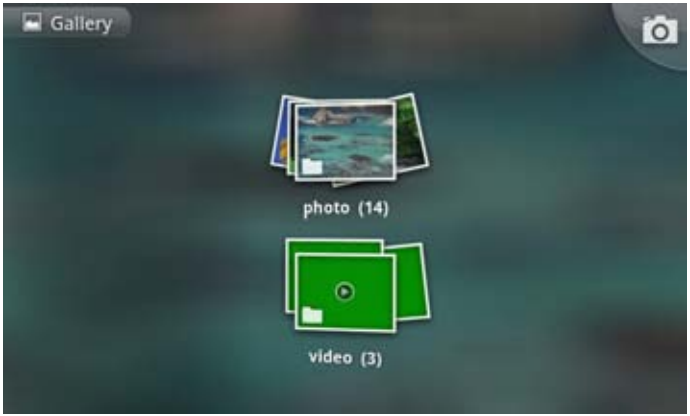


A context menu will appear.

*Not all items have a context menu; if a menu does not exist, nothing will happen if you touch and hold the item.*

English

# About Notifications

The icons that appear in the Notification bar at the top of the screen alerts you when new messages arrive or alarms or other application events occur.

View and respond to the notifications by opening the full Notifications panel.

- Drag the **Notification** bar down to the bottom of the screen to open the Notifications panel from any screen, or;
- On the Home screen, press the **Menu** key and then touch **Notifications** to open the Notifications panel.

1. **To respond to a notification:**

Touch a notification in the list; the Notifcations panel will close and the application associated with the notification will launch.

2. **To clear all notifications:**

Touch the Clear button at the top right of the Notifications panel; the panel will close and all notifications will be cleared.

3. **To close the Notifications panel:**

- Drag the handle at the bottom of the Notifications panel to the top of the screen, or;
- Press the **Back** key.

# Connecting to the Internet

This tablet can utilize Wi-Fi data networks to connect to the Internet. Wireless Wi-Fi technology can provide Internet access at distances of over 300 feet; however, this distance can be affected by your surrounding environment and Wi-Fi router.



## Requirements

In order to connect to the Internet, you will need the following:

1. **A wireless router or access point with a broadband Internet connection**

The wireless router must support Wi-Fi 802.11b/g connections. If the router supports 802.11n, make sure that it has been configured to acc qept 802.11b/g connections as well.

*A minimum connection speed of 64 Kbps is recommended. Faster speeds will enable a better Internet experience.*

2. **The wireless router network settings**

You will need to know the name of your network (SSID), as well as the password or other credentials if your network is secured. These settings can usually be found on the administration webpage of your wireless router.

Please refer to your wireless router's documentation for help, or ask your network administrator for details.

*You may encounter open Wi-Fi networks, or "hot spots." These networks are usually configured so that you can simply connect to them without needing to know its settings; the tablet will obtain all the information it needs from the router automatically.*

# Connect to a Wi-Fi network

The Notification bar displays icons that indicate your tablet's Wi-Fi status.

| | |
|---|---|
| | Notification that an open Wi-Fi network is in range. |
| | Connected to a Wi-Fi network (waves indicate connection strength). |
| [no icon] | There are no Wi-Fi networks in range, or the Wi-Fi radio is off. |

1. **Turn on the Wi-Fi radio if it is not already on. To turn on Wi-Fi:**

   a. Go to the Home screen:

      Press the **Home** key.

   b. Open the Settings menu:

      Tap the **Menu** key, then touch **Settings**.

   c. Open the Wireless & networks menu:

      Touch **Wireless & networks**.

   d. Open the Wi-Fi settings menu:

      Touch **Wi-Fi settings**.

   e. Make sure that the Wi-Fi option box is checked: Touch **Wi-Fi**.

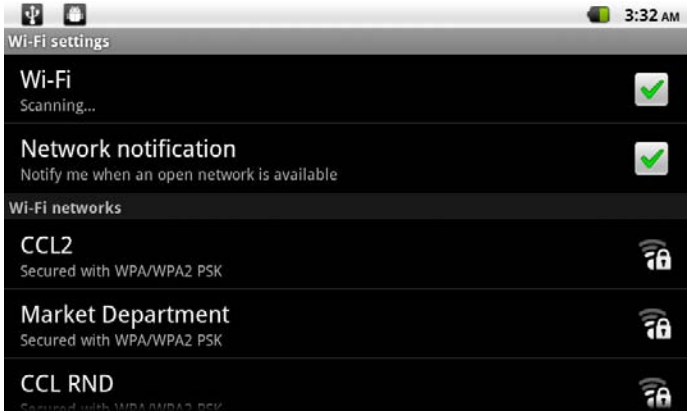


When Wi-Fi is on, the tablet will look for and display a list of available Wi-Fi networks.

*If a network that you have connected to previously is found, the tablet will connect to it.*

*If you don't see your network in the list, you can force the tablet to re-scan. To scan for networks, tap the* **Menu** *key, and then touch* **Scan**.

**2. Select an available Wi-Fi network to connect to:**

In the same Wi-Fi settings menu above, touch a network in the list.

If the network is open, the tablet will prompt you to confirm connection to the network. Touch **Connect** to confirm.

If the network is secured (as indicated by a Lock icon), the tablet will prompt you to enter a password or other credentials. Touch the Wireless password box to show the on-screen keyboard and then use it to enter the password. Touch **Connect** to confirm.

When you have successfully connected to a Wi-Fi network, the Notifications bar at the top of the screen will show a Wi-Fi signal indicator.

*To learn about how to add a Wi-Fi network when it is not in range or when the router is set to obscure the network name (SSID); or to configure advanced Wi-Fi options, please refer to the manual.*

English

# Browsing the Web

The Browser application lets you visit webpages and find information on the web. Keep up with the news, your friends, or enjoy video from YouTube™, the world's most popular video-sharing community.

To use Browser, the tablet must be connected to the Internet. Read the section "Connecting to the Internet" to learn how to connect to the Internet.

To open Browser, touch the Browser icon on the Home screen or in the Launcher.

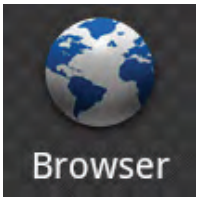

| Name | | Description |
|---|---|---|
| 1 | Address bar | Displays the address (URL) of the current page. Touch the bar to enter a new address or to search the web. |
| 2 | Bookmark icon | Touch the **Bookmark** icon to add or view bookmarks, to view your most visited sites, or to view your browser history. |

Some common Browser actions are described below.

✦ **To go to a webpage.**

| | |
|---|---|
| 1. Touch the **Address bar** at the top of the Browser screen. The keyboard will open automatically. (If the Address bar is not visible, drag the page down to return to the top of the Browser screen.) | |
| 2. Use the keyboard to enter the ad-dress (URL) of the webpage (e.g., m.youtube.com. | |
| 3. Touch **Go** to open the webpage. | |

✦ **To bookmark a webpage.**
Bookmark your favorite webpages in order to visit them quickly without entering a URL.

| | |
|---|---|
| 1. Go to the web-page that you want to bookmark | 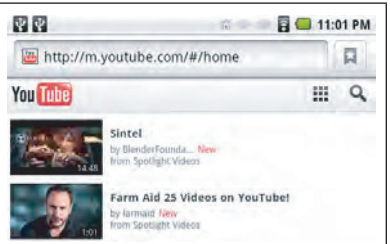 |
| 2. Touch the **Book-mark** icon to the right of the Ad-dress bar. | |
| 3. Touch the **Add** tile. | 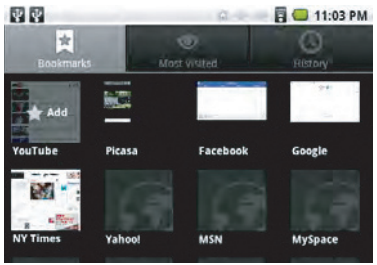 |

English

| | |
|---|---|
| 4. If desired, you can modify the name of the bookmark or its location (URL address). Otherwise, touch **OK** to finish adding the bookmark. | 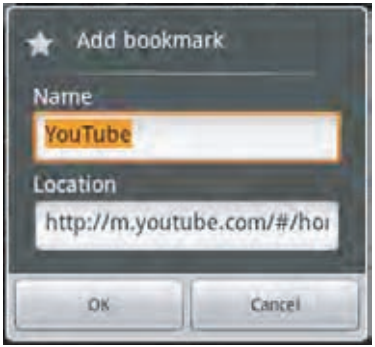 |

✦ **To go to a bookmarked webpage.**

| | |
|---|---|
| 1. Touch the **Bookmark** icon to the right of the Address bar. | |
| 2. Touch a bookmark tile to open it. | 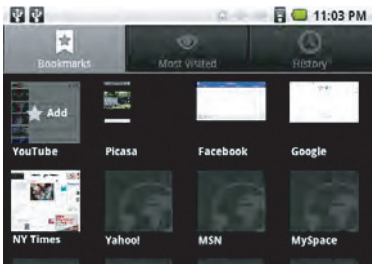 |

✦ **To open a new browser window.**

| | |
|---|---|
| 1. Press the **Menu** key to show the Browser options. | |
| 2. Touch **New Window** to open a new browser window. | |

✦ **To switch between browser windows.**

| | |
|---|---|
| 1. Press the **Menu** key to show the Browser options. | |
| 2. Touch **Windows** to show a list of open browser windows. | |
| 3. Touch the name of a window to switch to it, or touch the “x” to close the window. | 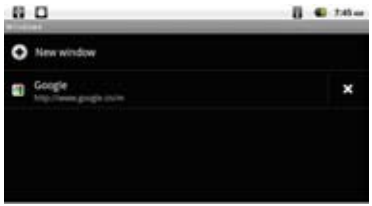 |

# Managing Applications

Downloading and installing new applications to your tablet can extend its functionality in many ways.

You can download and install applications from the included AppsLib store. To open the AppsLib store:

1. Touch the **Launcher** icon.
2. Touch the **AppsLib** icon.

When installing an application, it will tell you what functions of the phone it needs to control and if it needs access to your data. Make sure you review these access requirements carefully before completing the installation.

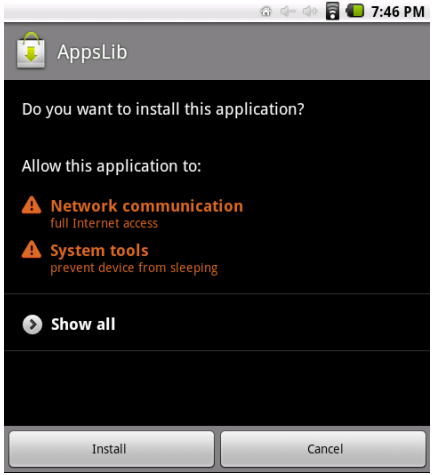


*Be especially cautious with applications that request access to many functions or to a significant amount of your data. You are responsible for the results of applications installed on your tablet.*

- You can learn more about GetJar , and browse applications by visiting their website at www.getjar.com.

*Some developers allow you to download and install applications directly from their website.*

*Support for third-party applications is provided by the respective application developer. ALLVIEW is not responsible for the behavior of these applications; please review the description and terms of use provided by third-party developers carefully before installing applications on your tablet.*

**To uninstall an application:**

1. From the Home screen, tap the **Menu** key.
2. Touch Settings to open the **Settings** menu.
3. Touch **Applications**, and then touch **Manage applications** to show a list of all applications installed on the tablet.

English

4. Touch the name of the application you want to uninstall; the Application Info screen will open.

5. Touch **Uninstall**. The tablet will prompt you to confirm.

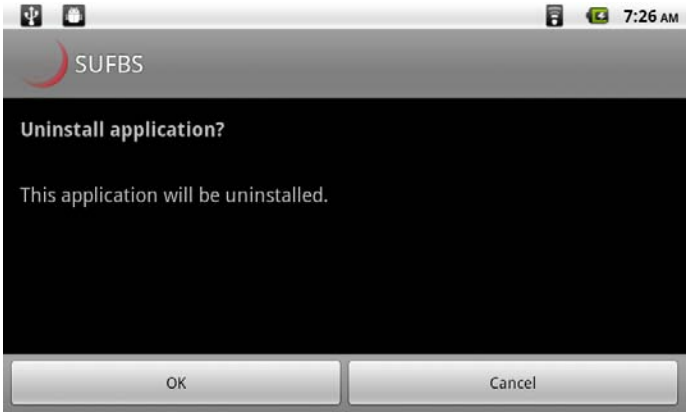


6. Touch **OK** to uninstall the application.

# Optional Connections

## Connecting to a Computer

Connect the tablet to a computer to transfer files.

1. **Connect your tablet to the computer.**

With the included USB cable:

- Plug the small end of the cable into the USB 2.0 Hi-speed connector of the tablet.
- Plug the large end of the cable into an available USB 2.0 Hi-speed port on the computer.

2. **When your tablet is connected, a USB icon will appear in the Notification bar.**

Drag the Notification bar down to open the notifications panel.

English

3. **Mount the storage drive.**

- Touch USB connected (Internal) to mount the tablet's built-in storage, then touch Mount when prompted to confirm. When mounted, you can copy files to/from your computer to it.
- If a memory card is installed, touch USB connected (External) to mount the card, then touch Mount when prompted to confirm. When mounted, you can copy files to/from the computer to it.

Your tablet will be recognized by the computer as a Removable Storage drive. Drag and drop files between your tablet and the computer. To learn more about copying files, please refer to the documentation included with your computer or operating system.

# Connecting to a TV

Connect to a TV to enjoy your tablet from the comfort of your living room. An HDMI cable (Type A-to-Type C) is required to connect the tablet to a TV.

Before connecting the tablet to the TV, you will have to adjust a few display settings on the tablet.

- Make sure that the tablet is set to output over HDMI
- For optimal visual performance, make sure that the video output resolution of your tablet matches the capabilities of the TV.

**To adjust the display settings:**

1. From the home screen, press the **Menu** key, and then touch Settings to show the settings menu.
2. Touch **Display** to show the Display settings.
3. Touch **HDMI**, and then touch a resolution option that matches the display capabilities of the TV:
    a. Choose **1080P** if your TV is capable of displaying 1080p video.
    b. Choose **720P** if your TV is capable of displaying 720p or 1080i video.

**To connect the tablet to the TV:**

1. Plug the small end of the HDMI cable into the mini HDMI connector of the tablet.
2. Plug the large end of the HDMI cable into the HDMI port on the TV.
3. Turn on the TV, and set its display mode to the HDMI port that the tablet is connected to.

The tablet's display will be output to the TV screen.

*If you need help setting the display mode of the TV, please refer to the documentation provided by the TV manufacturer.*

*If there is no sound from the tablet on your TV, you may need to set the* **HDMI switch** *sound settings.*

# Connecting Headphones

Connect a pair of headphones (or earphones) to the tablet to enjoy media in private.

Lower the volume level of the tablet before connecting headphones, and then slowly raise the volume to a comfortable listening level.

- The headphones must have a 3.5 mm (1/8 in) plug.
- When headphones are connected, speaker output will be disabled automatically.

*Hearing experts advise against the constant use of personal stereos played at high volume. Constant exposure to high volumes can lead to hearing loss. If you should experience ringing in the ears or hearing loss, discontinue use and seek medical advice.*

# Using the USB Full-Size Adapter

The USB full-size adapter can be used to connect and use USB devices with the tablet. The adapter converts the mini USB port on the tablet into a USB On-the-Go (OTG) connector.

## *Connecting a Keyboard*

For times when you want to type for an extended period of time, you may want to connect a full-size keyboard to the tablet.

Use the included USB full-size (Type A) adapter to connect a keyboard to the tablet.

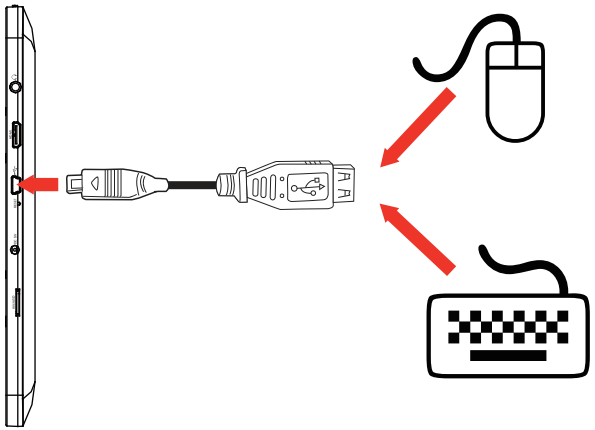

*You may also use this connection to add a mouse to the tablet.*

*The adapter supports one connection at a time. To use a keyboard and mouse simultaneously, you will need to add an external USB hub.*

## *Connecting a Storage Device*

Use the included USB full-size (Type A) adapter to connect a storage device to the tablet (e.g., a USB flash memory drive).

*This connection supports a maximum storage size of 4 GB. For additional storage capacity, a microSD card can be added to the tablet.*

# Setting the System Options

Open the system settings menu to adjust how the tablet looks and functions.

*Many applications will have their own settings; refer to the documentation provided by the application developer to learn more.*

To open the Settings menu:

1. From the Home screen, press the **Menu** key.
2. Touch **Settings** to open the Settings menu.

The settings are grouped by category. Touch a category to open and adjust its settings.

*Please refer to the manual for a description of the items in the Settings menu.*

English

# Specifications

Please visit www.allview.ro for the latest product information. Design, specifications, and manual are subject to change without notice.

| | |
|---|---|
| **Processor** | Cortex A8 (1 GHz) |
| **RAM** | 512 MB DDR3 |
| **Storage** | 4GB flash built-in<br>microSD card slot (max. 32GB supported) |
| **Display** | 10.1" TFT LCD (1024 x 768), capacitive touchscreen |
| **Wi-Fi Networking** | IEEE 802.11 b/g |
| **Video Output** | Mini HDMI, type C (1080p and 720p supported) |
| **Audio Output** | 3.5 mm headphone |
| **PC Interface** | USB 2.0 Hi-speed |
| **Additional Features** | Front-facing camera (0.3 MP)<br>Built-in microphone<br>Stereo speakers |
| **Operating System** | Android™ 2.3 |

| | |
|---|---|
| **Power** | Rechargeable Li-poly battery Power Adapter |

# Safety Notices

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.

**For Customer Use:**
Enter below the serial number that is located on the rear of the unit. Retain this information for future reference.

Model No. _____

Serial No. _____

**WARNING:** To prevent fire or shock hazard, do not expose this device to rain or moisture. Dangerous high voltage is present inside the enclosure. Do not open the cabinet.

**Protect your hearing:** Hearing experts advise against the constant use of personal stereos played at high volume. Constant exposure to high volumes can lead to hearing loss. If you should experience ringing in the ears or hearing loss, discontinue use and seek medical advice.

**Note:** If the product suddenly has no response or powers off, an electrostatic discharge may be the cause. In this circumstance, please follow the procedures below for recovery:

- Turn off the unit by pushing and holding the slide button at the right (Power off position) for 15 seconds.
- Turn on the unit again

**Note:** This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Use of shielded cable is required to comply with Class B limits in Subpart B of Part 15 of the FCC rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

## Important Safety Instructions

1. Read Instructions: All the safety and operating instructions should be read before the product is operated.

2. Retain Instructions: The safety and operating instructions should be retained for future reference.

3. Heed Warnings: All warnings on the product and in the operating instructions should be adhered to.

4. Follow Instructions: All operating and usage instructions should be followed.

5. Cleaning: Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

6. Attachments: Use only attachments recommended by the manufacturer. Use of other attachments may be hazardous.

7. Water and Moisture: Do not use this product near water (e.g., near a bath tub, washbowl, kitchen sink, laundry tub, in wet basements, or near a swimming pool and the like).

8. Ventilation: Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer instructions have been adhered to.

9. Power Sources: This product should be operated only from the type of power source indicated on the rating label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.

DECLARATION OF CONFORMITY
Nr. 1264 / 14.11.2011

We, SC VISUAL FAN SRL, importer located in Brasov, 16 Liliacului STR., J08/818/2002, CUI 14724950, assure, guarantee and declare on our own responsability, in accordance with art. 5 from HG nr. 1.022/2002 regarding the statute of the products and services that can jeopardiz life, health, work security and environmental protection, that:
The product ALLDRO3 – ALLVIEW brand MID - and the accesories that came with the product: 220V charger, headphones, USB cable and battery don't jeopardiz life, health, work security and environmental protection and they are according to:

- The Stipulations of HG nr.982/2007 witch transpose the essential requirements specified in Direction 2004/108/CE , regarding electromagnetical compatibility;
- The Direction regarding the low voltage equipment users assurance 73/32/CEE, modified by Direction 93/68/ CEE (HG 457/2003) si tests EN 55013:2001+A1:2003+A2:2006, EN 55020:2007, EN 610000-3-2:2006, EN 61000-3-3:1995+A1:2001+A2:2005;
- The Direction regarding the radio and telecomunication equipments R&TTE 1999/5/CE(HG 88/303).

The Product described upstairs in this Declaration and all the accesories are according to the next standards:
- Health EN 50360,EN 50361;
- Safety EN 6095-1;
- EMC EN 301 489-1-7/17;
- Radio spectrum EN 301511 EN 300328;

After the performed tests emerge that the samples comply with the upstairs specification, as the test results show.
Documentation is stored on VISUAL FAN LTD - Brasov, 61 Brazilor STR.
Also available on web:"www.allview.ro"

DIRECTOR
COTUNA GHEORGHE

Brasov

www.allview.ro

# ALLDRO 3

**Made in P.R.C.**
**Powered by Allview**
Importator S.C. Visual Fan S.R.L.
Str. Brazilor 61/ Braşov - România